

# C925de, C925dte, X925de

## **Technical Reference**

May 2012 www.lexmark.com

#### **Edition notice**

May 2012

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

For Lexmark technical support, visit <a href="http://support.lexmark.com">http://support.lexmark.com</a>.

For information on supplies and downloads, visit www.lexmark.com.

If you don't have access to the Internet, you can contact Lexmark by mail:

Lexmark International, Inc. Bldg 004-2/CSC 740 New Circle Road NW Lexington, KY 40550 USA

#### © 2012 Lexmark International, Inc.

All rights reserved.

#### **Trademarks**

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Mac and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries.

PCL® is a registered trademark of the Hewlett-Packard Company.

All other trademarks are the property of their respective owners.

#### **GOVERNMENT END USERS**

The Software Program and any related documentation are "Commercial Items," as that term is defined in 48 C.F.R. 2.101, "Computer Software" and "Commercial Computer Software Documentation," as such terms are used in 48 C.F.R. 12.212 or 48 C.F.R. 227.7202, as applicable. Consistent with 48 C.F.R. 12.212 or 48 C.F.R. 227.7202-1 through 227.7207-4, as applicable, the Commercial Computer Software and Commercial Software Documentation are licensed to the U.S. Government end users (a) only as Commercial Items and (b) with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

Contents 3

# Contents

E	dition notice	2
r	ntroduction	5
	Understanding letters after model numbers	5
L	earning about the printer	7
	Finding information about the printer	
_		
P	Printer Control Language (PCL) page formatting	
	Printable areas	
	Supported paper and envelope dimensions	10
Ρ	Printer Job Language (PJL)	12
	PJL commands information	
D	tostScript (DS) amulation	12
٢	PostScript (PS) emulation	
	Supported paper sizes	
	PostScript paper tray support	
	PostScript envelope size support	
	PostScript envelope tray support	16
P	Printer specifications	18
	Airflow requirement	18
	Noise emission levels	18
	Electrical specifications	19
	Power requirements	19
	Physical specifications	19
	Clearance requirements	20
	Environmental conditions	20
	Altitude and atmospheric pressure specifications	21
Δ	Appendix A: PCL support	22
	PCL emulation commands	
	GL/2 commands	

Appendix B: PJL support	31
Common variables for both printer languages	31
Lexmark-unique PJL variables for both printer languages	33
Common variables for PCL emulation	43
Lexmark-unique variables for PCL emulation	43
Common variables for PostScript emulation	44
Lexmark-unique variables for PostScript emulation	44
Lexmark-unique LRESOURCE variables	44
Status Readback commands	44
USTATUS unsolicited status variables	45
PJL messages for auto-continuable conditions	45
PJL messages for attendance conditions	52
PJL messages for paper handling	68
PJL messages for paper jams	73
Service errors	79
Device attendance messages	79
Lexmark-unique PJL commands	79
File and device protection commands	80
Appendix C: PostScript support	81
Supplemental operators	81
Page device parameters	84
User interpreter parameters	88
System interpreter parameters	89
Devices supported	92
Device parameters	94
PostScript message keys commands	103
Index	104

Introduction 5

## Introduction

### **Overview**

This edition of the *Technical Reference* contains information about the following printers or multifunction printers (MFPs):

C925de

C925dte

X925de

## **Understanding letters after model numbers**

 $Some\ Lexmark^{TM}\ printers\ and\ MFP\ options\ may\ have\ one\ or\ more\ letters\ after\ the\ model\ number\ to\ indicate\ features.$ 

Acronym	Meaning				
d	duplex <sup>1</sup>				
de	duplex and e-Task (electronic task) touch-screen interface				
dfe	duplex, finisher/stapler, and e-Task touch-screen interface				
dhe	duplex, high-capacity drawer, and e-Task touch-screen interface				
dhn	duplex, high-capacity drawer, and network				
dme	duplex, mailbox, and e-Task touch-screen interface				
dn	duplex and network				
dnf	duplex, network, and finisher/stapler				
dnw or dw	duplex, network, and wireless				
dt	duplex and additional tray <sup>2</sup>				
dte	duplex, additional tray <sup>2</sup> , and e-Task touch-screen interface				
dtfe	duplex, additional tray², finisher/stapler, and e-Task touch-screen interface				
dtme	duplex, additional tray², mailbox, and e-Task touch-screen interface				
dtn	duplex, additional tray <sup>2</sup> , and network				
dtpe	duplex, additional tray <sup>2</sup> , finisher with hole punch, and e-Task touch-screen interface				
dttn	duplex, tandem tray module, and network				
dtse	duplex, additional tray <sup>2</sup> , stacker, and e-Task touch-screen interface				
dtwe	duplex, additional tray <sup>2</sup> , wireless, and e-Task touch-screen interface				
е	e-Task touch-screen interface				
hdn	hard disk, duplex, and network				
1 Dunley (two-cided) printing using an entianal dunley unit or an internal dunley unit based on the product					

<sup>&</sup>lt;sup>1</sup> Duplex (two-sided) printing using an optional duplex unit or an internal duplex unit based on the product

<sup>&</sup>lt;sup>2</sup> The additional tray may be part of a drawer.

Introduction 6

Acronym	Meaning
n	network
nl	network light model
ni	network and ImageQuick
tn	network and additional tray <sup>2</sup>

<sup>&</sup>lt;sup>1</sup> Duplex (two-sided) printing using an optional duplex unit or an internal duplex unit based on the product

 $<sup>^{\</sup>rm 2}\,\mbox{The}$  additional tray may be part of a drawer.

# **Learning about the printer**

## Finding information about the printer

What are you looking for?	Find it here
Initial setup instructions:  Connecting the printer Installing the printer software	Setup documentation—The setup documentation came with the printer and is also available on the Lexmark Web site at http://support.lexmark.com.
<ul> <li>Additional setup and instructions for using the printer:</li> <li>Selecting and storing paper and specialty media</li> <li>Loading paper</li> <li>Configuring printer settings</li> <li>Viewing and printing documents and photos</li> <li>Setting up and using the printer software</li> <li>Configuring the printer on a network (depending on your printer model)</li> <li>Caring for and maintaining the printer</li> <li>Troubleshooting and solving problems</li> </ul>	User's Guide—The User's Guide is available on the Software and Documentation CD. For updates, check our Web site at http://support.lexmark.com.
Instructions for:  Installing the printer using Guided or Advanced wireless setup  Connecting the printer to an Ethernet or a wireless network  Troubleshooting printer connection problems	Networking Guide—Open the Software and Documentation CD, and then look for Printer and Software Documentation under the Pubs folder. From the list of publications, click the Networking Guide link.
Help using the printer software	Windows or Mac Help—Open a printer software program or application, and then click Help.  Click to view context-sensitive information.  Notes:  Help is automatically installed with the printer software.  The printer software is located in the printer program folder or on the desktop, depending on your operating system.

What are you looking for?	Find it here
Latest supplemental information, updates, and customer support:	Lexmark Support Web site— http://support.lexmark.com
<ul> <li>Documentation</li> <li>Driver downloads</li> <li>Live chat support</li> <li>E-mail support</li> <li>Voice support</li> </ul>	Note: Select your country or region, and then select your product to view the appropriate support site.  Support telephone numbers and hours of operation for your country or region can be found on the Support Web site or on the printed warranty that came with your
voice support	printer.  Record the following information (located on the store receipt and at the back of the printer), and have it ready when you contact customer support so that they may serve you faster:
	<ul> <li>Machine Type number</li> <li>Serial number</li> <li>Date purchased</li> <li>Store where purchased</li> </ul>
Warranty information	<ul> <li>Warranty information varies by country or region:</li> <li>In the US—See the Statement of Limited Warranty included with this printer, or at http://support.lexmark.com.</li> <li>In other countries and regions—See the printed warranty that came with your printer.</li> </ul>


## **Printer Control Language (PCL) page formatting**

For more information on PCL, see the *Printer Languages and Interfaces Technical Reference*. It contains a complete listing with descriptions of PCL commands.

To determine which PCL commands your printer supports, see "Appendix A: PCL support" on page 22.

### **Printable areas**

The printable areas and logical pages for PCL emulation (both portrait and landscape orientation) are illustrated below. See the legend that follows for definitions of areas **A** through **I**.

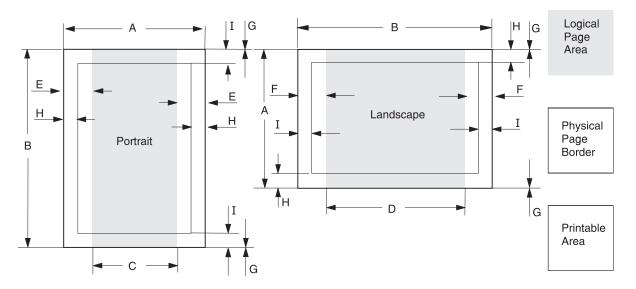

Le	egend:								
Α	Portrait physical page width and landscape physical page length								
В	Portrait physical page length and landscape physical page width								
С	Portrait logical page width								
D	Landscape logical page width								
E	Distance between the side edge of the physical page and the logical page in portrait								
F	Distance between the side edge of the physical page and the logical page in landscape								
G	Distance between the top and bottom edge of the physical page and logical page								
Н	Distance between the left and right edge of the physical page and the printable area in portrait, or distance between the top and bottom edge of the physical page and printable area in landscape								
l	Distance between the top and bottom edge of the physical page and the printable area in portrait, or distance between the left and right edge of the physical page and the printable area in landscape								

**Note:** The tables that follow in this chapter list the page sizes and dimensions of each area labeled on the preceding diagram for all paper and envelope sizes your printer supports.

### Supported paper and envelope dimensions

The following table lists the page sizes and print area dimensions for all supported paper and envelope sizes. For more information about the printable areas and logical pages for PCL emulation, see "Printable areas" on page 9.

Selection		Paper/envelope dimensions		Dimensions by area (pels) <sup>1</sup>								
Page size parameters <sup>2</sup>	Name	mm	inches	А	В	С	D	Е	F	G	Н	ı
			•	Paper								
2, 602	Letter	216 x 279	8.5 x 11	5100	6600	4800	6360	150	120	0	100	100
3, 603	Legal	216 x 356	8.5 x 14	5100	8400	4800	8160	150	120	0	100	100
12, 45, 612	JIS B5	182 x 257	7.2 x 10.1	4300	6070	4000	5830	150	120	0	100	100
26, 626	A4 (198 mm) <sup>3</sup>	210 x 297	8.3 x 11.7	4960	7014	4676	6778	142	118	0	80	100
26, 626	A4 (203 mm) <sup>3</sup>	210 x 297	8.3 x 11.7	4960	7014	4800	6778	80	118	0	80	100
1, 601	Executive	184.2 x 266.7	7.25 x 10.5	4350	6300	4050	6060	150	120	0	100	100
13, 613	A5	148 x 210	5.83 x 8.27	3496	4960	3196	4720	142	118	0	100	100
300	Oficio (México)	215.9 x 340.4	8.5 x 13.4	5100	8040	4800	7800	150	120	0	100	100
46	JIS B4	257 x 364	10.12 x 14.33	6070	8600	5786	8364	142	118	0	100	100
27	A3	297 x 420	11.7 x 16.54	7014	9920	6730	9684	142	118	0	100	100
6 or 11	11 x 17	279.4 x 431.8	11 x 17	6600	10200	6300	9960	150	120	0	100	100
4 or 10	Folio	216 x 330	8.5 x 13	5100	7800	4800	7560	150	120	0	100	100
15	Statement	139.7 x 215.9	5.5 x 8.5	3300	5100	3000	4860	150	120	0	100	100
24	A6	105 x 148	4.13 x 5.83	2480	3496	2199	3260	142	118	0	100	100

<sup>&</sup>lt;sup>1</sup> Pel dimensions are for 600 dpi.

**Note:** The explanation of the printable area assumes that the Print Area menu item is set to **Normal**. For more information, see "Print Area Menu Item" in the PCL chapter of the *Printer Language and Interfaces Technical Reference*.

<sup>&</sup>lt;sup>2</sup> Page Size Parameters are explained in the Page Control table in the PCL chapter of the *Printer Language and Interfaces Technical Reference*.

<sup>&</sup>lt;sup>3</sup> The width of the logical page for A4 paper can be changed from the printer control panel or your application.

<sup>&</sup>lt;sup>4</sup> For the Universal paper size, the area dimensions are listed in pel ranges.

<sup>&</sup>lt;sup>5</sup> Paper ID 99 will be supported for backward compatibility with other Lexmark printers. Paper ID 99 has the same logical paper size as ID 100 (compatible with HP LaserJet 5Si/5SiMx) but is 8 pels wider than the Lexmark 4039.

<sup>&</sup>lt;sup>6</sup> To support two-sided printing, the Universal paper size length must be between 5.83 inches (148 mm) and 17 inches (431.8 mm); and the width must be between 8.27 inches (210 mm) and 11.69 inches (297 mm).

Selection		Paper/envelope dimensions		Dimensions by area (pels) <sup>1</sup>								
Page size parameters <sup>2</sup>	Name	mm	inches	А	В	С	D	Е	F	G	Н	ı
101	Universal	297 x 1219 <sup>6</sup>	11.69 x 48 <sup>6</sup>	2124– 7014 <sup>4</sup>	3498– 28800 <sup>4</sup>	1824– 6714 <sup>4</sup>	3258- 28560 <sup>4</sup>	150	120	0	100	100
				Envelop	е				•		•	
80	7 3/4 Envelope	98.4 x 190.5	3.875 x 7.5	2324	4500	2024	4260	150	120	0	100	100
89	9 Envelope	98.4 x 225.4	3.875 x 8.875	2324	5324	2024	5084	150	120	0	100	100
81	10 Envelope	104.8 x 241.3	4.125 x 9.5	2474	5700	2174	5460	150	120	0	100	100
90	DL Envelope	220 x 110	8.66 x 4.33	2598	5196	2314	4960	142	118	0	100	100
91	C5 Envelope	229 x 162	9.02 x 6.38	3826	5408	3542	5172	142	118	0	100	100
99 <sup>5</sup> , 100	B5 envelope	176.0 x 250.0	6.93 x 9.84	4156	5904	3872	5668	142	118	0	100	100
600	Other Envelope	216 x 356	8.5 x 14	7012	8400	4800	8160	150	120	0	100	100

<sup>&</sup>lt;sup>1</sup> Pel dimensions are for 600 dpi.

**Note:** The explanation of the printable area assumes that the Print Area menu item is set to **Normal**. For more information, see "Print Area Menu Item" in the PCL chapter of the *Printer Language and Interfaces Technical Reference*.

<sup>&</sup>lt;sup>2</sup> Page Size Parameters are explained in the Page Control table in the PCL chapter of the *Printer Language and Interfaces Technical Reference*.

<sup>&</sup>lt;sup>3</sup> The width of the logical page for A4 paper can be changed from the printer control panel or your application.

<sup>&</sup>lt;sup>4</sup> For the Universal paper size, the area dimensions are listed in pel ranges.

<sup>&</sup>lt;sup>5</sup> Paper ID 99 will be supported for backward compatibility with other Lexmark printers. Paper ID 99 has the same logical paper size as ID 100 (compatible with HP LaserJet 5Si/5SiMx) but is 8 pels wider than the Lexmark 4039.

<sup>&</sup>lt;sup>6</sup> To support two-sided printing, the Universal paper size length must be between 5.83 inches (148 mm) and 17 inches (431.8 mm); and the width must be between 8.27 inches (210 mm) and 11.69 inches (297 mm).

## **Printer Job Language (PJL)**

### PJL commands information

Your printer supports complete PJL commands, including certain commands that cause the printer to enter PCL emulation, PostScript emulation, and Personal Printer Data Stream (PPDS).

For a complete listing with descriptions of PJL commands, see the *Printer Languages and Interfaces Technical Reference*.

To determine which commands your printer supports, see "Appendix B: PJL support" on page 31.

## PostScript (PS) emulation

Your printer supports complete PostScript emulation supplemental operators. For full, detailed descriptions of these operators, see the PostScript emulation chapter of the *Printer Languages and Interfaces Technical Reference*.

To determine which commands your printer supports, see "Appendix C: PostScript support" on page 81.

### **Supported paper sizes**

<ul><li>✓ = Support</li><li>X = Not support</li><li>Paper sizes</li></ul>		Printer model				
Size	Literal name	Size (mm)	Size (inches)	Size (points)	C925de, C925dte	X925de
11 x 17	11x17	279.4 x 431.8	11 x 17	792 x 1224	<b>√</b>	<b>√</b>
17 x 11	ledger	431.8 x 279.4	17 x 11	1224 x 792	<b>√</b>	<b>√</b>
А3	a3	297 x 420	11.7 x 16.54	842 x 1191	<b>√</b>	<b>√</b>
A4	a4	210.0 x 297.0	8.3 x 11.7	595 x 842	<b>√</b>	<b>√</b>
A5	a5	148.0 x 210.0	5.83 x 8.27	419 x 595	<b>√</b>	<b>√</b>
A6	a6	105.0 x 148.0	4.13 x 5.83	297 x 419	<b>√</b>	<b>√</b>
Executive	executivepage	184.2 x 266.7	7.25 x 10.5	522 x 756	<b>√</b>	<b>√</b>
Folio	folio	215.9 x 330.2	8.5 x 13.0	612 x 936	<b>√</b>	<b>√</b>
JIS B4	b4*	257 x 364	10.12 x 14.33	729 x 1032	<b>√</b>	<b>√</b>
JIS B5	b5*	182.0 x 257.0	7.2 x 10.1	516 x 729	<b>√</b>	<b>√</b>
Legal	legal	215.9 x 355.6	8.5 x 14.0	612 x 1008	<b>√</b>	<b>√</b>
Letter	letter	215.9 x 279.4	8.5 x 11.0	612 x 792	<b>√</b>	<b>√</b>
Oficio	oficio	215.9 x 340.4	8.5 x 13.4	612 x 965 (Lexmark-unique size) 612 x 972 (official PostScript size)	<b>√</b>	<b>√</b>
Statement	statement	139.7 x 215.9	5.5 x 8.5	396 x 612	<b>√</b>	<b>✓</b>
Universal		297 x 1219	11.69 x 48	841.68 x 3456	<b>√</b>	<b>✓</b>

<sup>\*</sup> This is a Japanese Industry Standard (JIS) paper size. The same named designation is used by the JIS and International Organization for Standardization (ISO) for different paper sizes.

### PostScript paper tray support

When the printer receives one of the operators listed in "Tray selected with tray operators" on page 14, it performs the actions listed in this section. This paper tray selection process ends when a suitable paper source is chosen and paper is fed from this tray.

- The printer checks the value of **manualfeed** in **statusdict** and the ManualFeed page device parameter. If either one is true, then the printer sends a message to load the requested size in the manual feeder or multipurpose feeder.
- The PageSize Policy is set to **0** by means of **setpagedevice**.
- The printer checks the paper size loaded in the current active source to determine if it matches the requested size. If the sizes match, then the paper is fed from the active source.

**Note:** The current active tray is the last source that was selected from the printer control panel or by the printer language.

- If the requested size and the size loaded in the active source do not match, then the sources are searched in the order defined by the Priority array in the InputAttributes dictionary in the pagedevice dictionary.
- If the requested media size is not found by the previous search, then the following search order is used:
  - Tray 1
  - Tray 2
  - Tray 3
  - Multipurpose feeder
  - Tray 4
  - Tray 5
- If the requested size cannot be located in any automatic source, then a **configurationerror** is issued and the job is flushed.

For printers that support automatic two-sided printing (duplexing):

- Automatic two-sided printing is not supported for custom-size paper or for envelopes in the multipurpose feeder.
   Automatic two-sided printing is supported from the multipurpose feeder for all other papers.
- If the paper source is changed before the back side of a two-sided page prints, then a blank back page prints, the paper source changes, and the information for the back side of the page is printed on the front side of a page sent from the new paper source.

When these operators are used, it is equivalent to executing the following PostScript emulation sequence:

```
<< /PageSize [x y]/ImagingBBox null /Policies << /PageSize 0>> >>
setpagedevice
```

where **x y** are the PageSize in points.

#### Tray selected with tray operators

√ = Supported  X = Not supported		Printer model				
Operator	Tray selected (corresponding image size is set)	C925de, C925dte	X925de			
11x17tray	Tray with 11 x 17-size paper	<b>✓</b>	<b>✓</b>			
a3tray	Tray with A3-size paper	<b>√</b>	<b>✓</b>			

√ = Supported						
X = Not supported		Printer model				
Operator	Tray selected (corresponding image size is set)	C925de, C925dte	X925de			
a4tray	Tray with A4-size paper	✓	<b>√</b>			
a5tray	Tray with A5-size paper	✓	<b>√</b>			
a6tray	Tray with A6-size paper	<b>✓</b>	<b>✓</b>			
b4tray	Tray with B4-size paper	✓	<b>✓</b>			
b5tray	Tray with B5-size paper	✓	<b>✓</b>			
customtray	Tray with custom-size paper	х	Х			
executivetray	Tray with executive-size paper	✓	<b>✓</b>			
foliotray	Tray with folio-size paper	✓	<b>✓</b>			
ledgertray	Tray with ledger-size paper	✓	<b>✓</b>			
legaltray	Tray with legal-size paper	✓	<b>√</b>			
lettertray	Tray with letter-size paper	<b>√</b>	<b>√</b>			
oficiotray	Tray with oficio-size paper	<b>√</b>	<b>√</b>			
statementtray	Tray with statement-size paper	<b>√</b>	<b>√</b>			

### PostScript envelope size support

The literal names in "Envelope sizes supported" on page 15 are also supported as operators in **userdict**. These operators change the image size, but do not change the active paper source. Therefore, when these operators are used, part of the image may be clipped.

When these literal names are used as operators, it is equivalent to executing the following PostScript emulation sequence. The following example uses a 3.875 x 7.5 envelope.

<</Policies <</PageSize 7>> /PageSize [279 540]>> >>setpagedevice

### **Envelope sizes supported**

<ul><li>✓ = Supported</li><li>X = Not supported</li><li>Envelope sizes</li></ul>					Printer (	model
Size name	Literal name	Size (mm)	Size (inches)	Size (points)	C925de, C925dte	X925de
7 3/4	3.875x7.5envelope	98.4 x 190.5	3.875 x 7.5	279 x 540	<b>√</b>	<b>✓</b>
Commercial 9	3.875x8.875envelope	98.4 x 225.4	3.875 x 8.875	279 x 639	<b>√</b>	<b>✓</b>

<ul><li>✓ = Supported</li><li>X = Not supported</li><li>Envelope sizes</li></ul>						model
Size name	Literal name	Size (mm)	Size (inches)	Size (points)	C925de, C925dte	X925de
Commercial 10	4.125x9.5envelope	104.8 x 241.3	4.125 x 9.5	297 x 684	<b>✓</b>	✓
International B5	176x250envelope	176 x 250	6.93 x 9.84	499 x 708	<b>√</b>	✓
International C5	162x229envelope	162 x 229	6.38 x 9.01	459 x 649	<b>√</b>	✓
International DL	110x220envelope	110 x 220	4.33 x 8.66	312 x 624	<b>√</b>	✓
Other envelope	otherenvelope	296.93 x 427.48	11.69 x 16.83	842 x 1212	<b>√</b>	<b>✓</b>

#### Literal names supported

<ul><li>✓ = Supported</li><li>X = Not Supported</li><li>Literal names</li></ul>		Printer	model
Literal name	Compatible literal name	C925de, C925dte	X925de
b5envelope	176x250envelope	<b>✓</b>	✓
c5envelope	162x229envelope	✓	✓
com10envelope	4.125x9.5envelope	✓	<b>✓</b>
dlenvelope	110x220envelope	<b>✓</b>	<b>✓</b>
monarcenvelope	3.875x7.5envelope	<b>✓</b>	<b>✓</b>

### PostScript envelope tray support

If **manualfeed** in **statusdict** and the ManualFeed page device parameter are false when the printer receives one of the envelopetray operators listed in "Envelopetray operator selections" on page 17, then the following occurs:

- The printer sets the PageSize Policy to 0.
- The printer checks the active source to see if it matches the requested envelope size. If the sizes match, then the envelope is fed from the active source.

Note: The active source is the last source selected from the printer control panel or data stream.

- If the requested size and the size loaded in the active source do not match, then the sources are searched in the order defined by the Priority array in the InputAttributes dictionary in the pagedevice dictionary.
- If the requested media size is not found by the previous search, then the following search order is used:
  - Envelope feeder
  - Multipurpose feeder

- If the requested size and type are not available from any automatic source, then you are prompted to load the requested envelope size and type in the manual feed source.
- If the size is still not available, then a **configurationerror** is issued, and the print job is flushed.

If manualfeed or ManualFeed is true, then the printer prompts you to load the requested size manually. If no manual feed exists on the printer, then a **rangecheck** error message is issued.

The envelope tray the printer selects when it receives an **envelopetray** operator is listed in "Envelopetray operator selections" on page 17. These operators are equivalent to executing the following PostScript emulation sequence:

```
<</PageSize [x y] /ImagingBBox null /Policies<</PageSize 0>> >> setpagedevice
```

where **x y** are the PageSize in points.

#### **Envelopetray operator selections**

<ul><li>✓ = Supported</li><li>X = Not supported</li></ul>			
Tray operators		Printer mod	el
Operator	Tray selected (corresponding image size is set)	C925de, C925dte	X925de
110x220envelopetray	Tray with 110 x 220-size envelopes	✓	✓
dlenvelopetray	Tray with 110 x 220-size envelopes	<b>✓</b>	<b>√</b>
162x229envelopetray	Tray with 162 x 229-size envelopes	<b>✓</b>	<b>✓</b>
c5envelopetray	Tray with 162 x 229-size envelopes	<b>✓</b>	<b>√</b>
176x250envelopetray	Tray with 176 x 250-size envelopes	<b>✓</b>	<b>√</b>
b5envelopetray	Tray with 176 x 250-size envelopes	<b>✓</b>	<b>√</b>
3.875x7.5envelopetray	Tray with 3.875 x 7.5-size envelopes	<b>✓</b>	<b>√</b>
monarcenvelopetray	Tray with 3.875 x 7.5-size envelopes	<b>✓</b>	<b>√</b>
3.875x8.875envelopetray	Tray with 3.875 x 8.875-size envelopes	<b>✓</b>	<b>√</b>
4.125x9.5envelopetray	Tray with 4.125 x 9.5-size envelopes	<b>✓</b>	<b>✓</b>
com10envelopetray	Tray with 4.125 x 9.5-size envelopes	<b>✓</b>	<b>/</b>
otherenvelopetray	Tray with other size envelopes	<b>✓</b>	<b>V</b>

# **Printer specifications**

## **Airflow requirement**

The room should meet ASHRAE 62—1989 standards.

### Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

	1-meter average sound pressure, dBA			
Status	C925de, C925dte	X925de		
ADF color scan	Not applicable	53		
ADF mono copy	Not applicable	54		
ADF mono scan	Not applicable	54		
Idle/ready	39	39		
Printing (duplex)	55	55		
Printing (simplex color)	53	53		
Printing (simplex mono)	53	53		
Quiet mode printing (color)	54	54		
Quiet mode printing (mono)	53	53		
Note: Measurements apply to 30	00-dpi, 600-dpi, and 1200-IO printi	ng		

	Decl	Declared sound power level, bels		
Status	C925de, C925dte	X925de		
ADF color scan	Not applicable	6.8		
ADF mono copy	Not applicable	6.8		
ADF mono scan	Not applicable	6.8		
Idle/ready	5.4	5.4		
Printing (duplex)	7.0	7.0		
Printing (simplex color)	6.8	6.8		
Printing (simplex mono)	6.8	6.8		
Quiet mode printing (color)	6.9	6.9		
Quiet mode printing (mono)	6.7	6.7		
Note: Measurements apply to 300	O-dpi, 600-dpi, and 1200-IQ printir	ig.		

## **Electrical specifications**

Printer model	Electrical specification
C925 SFP and X925 MFP low-voltage models	100–127 V at 50–60Hz, nominal
	90–137 V, extreme
C925 SFP and X925 MFP high-voltage	220–240 V at 50–60Hz, nominal (available only in some countries or regions)
models	198–259 V, extreme

Warning—Potential Damage: Do not use voltage converters with printers.

## **Power requirements**

The following table specifies the nominal average power requirements for the base configuration, including fuser power.

State	C925de, C925dte	X925de				
	Average power while printing continuously					
Print	591 W	623 W				
Average power while idle	!	<u> </u>				
Hibernate mode	4.2 W	5.0 W				
Ready mode	105 W	135 W				
Sleep mode	12 W	25.9 W				
Off	o w	0 W				
Average power while copying	g continuously					
Сору	Not applicable	632 W				
Average power while scanni	ng continuously					
ADF scan	Not applicable	156 W				
Average current while printi	Average current while printing					
100 V	Not applicable	Not applicable				
120 V	5.409 A	7.803 A				
230 V	5.705 A	7.803 A				

## **Physical specifications**

### Single-function printer dimensions (unpackaged)

Printer model	Height	Width		Weight with cartridge (unpackaged)
C925de, C925dte	420 mm (16.54 in.)	622 mm (24.49 in.)	557 mm (21.93 in.)	48.3 kg (106.5 lb)

### Multiple-function printer dimensions (unpackaged)

Printer model	Height	Width	· ·	Weight with cartridge (unpackaged)
X925de	771 mm (30.35 in.)	672 mm (26.46 in.)	668 mm (26.30 in.)	79.3 kg (174.8 lb)

### Dimensions of the C925 or X925 hardware options (unpackaged)

Option	Height	Width	Depth	Weight with cartridge (unpackaged)
Optional 550-sheet tray	135 mm (5.32 in.)	590 mm (23.23 in.)	539 mm (21.22 in.)	14 kg (30.8 lb)
Caster base	101.6 mm (4 in.)	685.8 mm (27 in.)	660.4 mm (26 in.)	9 kg (20 lb)
Printer stand	406.4 mm (16 in.)	656.68 mm (25.85 in.)	772.3 mm (27.89 in.)	14.96 kg (33 lb)

### Printer dimensions when extensions are in open position

Printer model	Height	Width	Depth
C925de, C925dte	420 mm (16.54 in.)	863.6 mm (34 in.)	938 mm (36.93 in.)
X925de	1066.8 mm (42 in.)	914.4 mm (36 in.)	1049 mm (41.3 in.)

## **Clearance requirements**

Printer model	Left side	Right side	Front	Rear	Тор
C925de, C925dte	100 mm (3.94 in.)	385 mm (15.16 in.)	380 mm (15 in.)	100 mm (3.94 in.)	100 mm (3.94 in.)
Printer model	Left side	Right side	Front	Rear	Тор
X925de	100 mm (3.94 in.)	348 mm (13.7 in.)	282 mm (11.1 in.)	100 mm (3.94 in.)	285 mm (11.22 in.)

### **Environmental conditions**

**Note:** When shipping or storing printers, always pack the printer supplies (such as cartridges and photoconductors) separately.

#### Printer air temperature ranges

Printer model	Operating value		Shipping and storage value (printer with cartridges)		
	Product operating	Print quality assurance	Product not operating*	Packaged	
C925de, C925dte	10.0 to 33.0°C (50 to 91.4°F)	15.0 to 27.0°C (59 to 80.6°F)	-5 to 40°C (23 to 104°F)	-40 to 43.3°C (-40 to 110°F)	
X925de	10.0 to 33.0°C (50 to 91.4°F)	15.0 to 27.0°C (59 to 80.6°F)	-5 to 40°C (23 to 104°F)	-40 to 43.3°C (-40 to 110°F)	
* Tempera	* Temperature slope = 15°C per hour				

#### Values for the ambient operating environment

Printer model	Ambient operating environment
C925de, C925dte	15.6 to 32.2°C (60 to 90°F) 8–80% RH
X925de	15.6 to 32.2°C (60 to 90°F) 8–80% RH

### **Printer humidity ranges**

Printer	Air relative humidity (RH)			
model	Operating value		Shipping and storage value	
	Product operating	Print quality assurance	Unpackaged	Packaged
C925de, C925dte	20–80%	35–70%	8-80%	5–95%
X925de	20–80%	35–70%	8–80%	5–95%

### **Cartridge air temperature ranges**

	Shipping and storage value
model	Cartridges (packaged)
C925de, C925dte	-40 to 43.3°C (-40 to 110°F)
X925de	-40 to 43.3°C (-40 to 110°F)

## Altitude and atmospheric pressure specifications

### **Altitude specifications**

Printer model Altitude (above sea level)		ude (above sea level)
	Operating value	Shipping and storage value
C925de, C925dte	0–2300 m (7546 ft)	Less than 10300 m (34000 ft)
X925de	0–2300 m (7546 ft)	Less than 10300 m (34000 ft)

### **Atmospheric pressure specifications**

Printer model	Atmospheric pressure (operating value)
C925de, C925dte	575 mmHg, 767 HPa
X925de	575 mmHg, 767 HPa

Appendix A: PCL support

# **Appendix A: PCL support**

## **PCL** emulation commands

√ = Supported			
X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
Decimal 8	Backspace (BS)	✓	✓
Decimal 9	Horizontal Tab (HT)	<b>✓</b>	<b>✓</b>
Decimal 10	Line Feed (LF)	<b>√</b>	<b>√</b>
Decimal 12	Form Feed (FF)	✓	<b>√</b>
Decimal 13	Carrier Return (CR)	✓	<b>√</b>
Decimal 14	Select Secondary Font (SO)	✓	<b>√</b>
Decimal 15	Select Primary Font (SI)	✓	<b>√</b>
Decimal 32	Space (SP)	✓	<b>√</b>
<sup>ESC</sup> E	Printer Reset	✓	<b>√</b>
ESCγ	Display Functions On	✓	<b>√</b>
ESCZ	Display Functions Off	<b>√</b>	<b>√</b>
<sup>ESC</sup> Z	Print Test Page	х	Х
<sup>ESC</sup> &a#C	Set Horizontal Cursor Position (Column Number)	<b>✓</b>	<b>√</b>
<sup>ESC</sup> &a#G	Duplex Page Side Selection	<b>✓</b>	<b>√</b>
<sup>ESC</sup> &a#H	Set Horizontal Cursor Position (in Decipoints)	<b>✓</b>	<b>√</b>
<sup>ESC</sup> &a#L	Set Left Margin	✓	<b>√</b>
<sup>ESC</sup> &a#M	Set Right Margin	✓	<b>√</b>
<sup>ESC</sup> &a#N	Negative Motion	x	Х
<sup>ESC</sup> &a#P	Print Direction	<b>✓</b>	<b>√</b>
<sup>ESC</sup> &a#R	Set Vertical Cursor Position (Row Number)	<b>✓</b>	<b>√</b>
<sup>ESC</sup> &a#V	Set Vertical Cursor Position (in Decipoints)	<b>✓</b>	<b>√</b>
<sup>ESC</sup> &b#M	Monochrome Print Mode	<b>✓</b>	<b>√</b>

√ = Supported  X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
ESC&b#W[data]	Key / Value Pair	X	X
ESC&c#T	Character Text Path Direction	✓	✓
ESC&d@	Disable Underline	<b>✓</b>	✓
ESC&d#A	Collation - Collated Copies (QTY)	<b>✓</b>	✓
ESC&d#D	Select Underline Type	<b>✓</b>	<b>✓</b>
ESC&f#F	Set Universal Height	<b>✓</b>	✓
ESC&f#G	Set Universal Width	<b>✓</b>	✓
ESC&f#O	Set Universal Feed Direction	<b>✓</b>	✓
ESC&f#W	Set Universal Custom Name	<b>√</b>	✓
ESC&f#S	Push/Pop Cursor		<b>✓</b>
ESC&f#X	Macro Control	<b>✓</b>	✓
ESC&f#Y	Set Macro ID	<b>✓</b>	✓
<sup>ESC</sup> &k#G	Set Line Termination	<b>✓</b>	✓
ESC&k#H	Set Horizontal Motion Index (HMI)	<b>√</b>	✓
ESC&k#S	Select Primary and Secondary Pitch	<b>✓</b>	<b>✓</b>
ESC&k#W	Text Scale Mode	х	х
ESC& L#A	Set Page Size	<b>✓</b>	<b>✓</b>
ESC& L#C	Set Vertical Motion Index (VMI)	<b>✓</b>	<b>✓</b>
ESC& L#D	Set Line Spacing	<b>✓</b>	<b>✓</b>
ESC& <b>L</b> #E	Set Top Margin	<b>✓</b>	<b>✓</b>
ESC& L#F	Set Text Length	<b>✓</b>	<b>✓</b>
ESC&L#G	Set Output Bin	✓	✓
<sup>ESC</sup> & <b>ℓ</b> #H	Select Paper Feed	<b>√</b>	<b>─</b> ✓
ESC& L#L	Skip Perforation	✓	✓
ESC& L#O	Select Orientation	<b>√</b>	✓
ESC& <b>L</b> #M(b)	Media Type	х	х
ESC & <b>L</b> #P	Set Page Length	<b>√</b>	<b>√</b>

√ = Supported X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
ESC&L#S	Simplex/Duplex	<b>√</b>	<b>√</b>
<sup>ESC</sup> & <b>ℓ</b> 1T	Job Separation	х	х
<sup>ESC</sup> & <b>£</b> #U	Left (Long-Edge) Offset Registration	✓	<b>√</b>
ESC&L#X	Set Copy Count	<b>√</b>	<b>√</b>
ESC& L#Z	Top (Short-Edge) Offset Registration	<b>√</b>	<b>√</b>
ESC&n#W [operation] [string id]	Alphanumeric ID	<b>✓</b>	<b>✓</b>
ESC&p#C	Palette Control	<b>✓</b>	<b>√</b>
ESC&p#I	Palette Control ID	<b>✓</b>	<b>√</b>
ESC&p#S	Select Palette	<b>√</b>	<b>√</b>
ESC&p#X[data]	Transparent Print Data	<b>√</b>	<b>√</b>
ESC&r#F	Flush All Pages	<b>√</b>	<b>√</b>
ESC&s#C	End-Of-Line Text Wrap	<b>√</b>	<b>√</b>
ESC&t#P	Text Parsing Method	<b>√</b>	<b>√</b>
ESC&u#D	Unit of Measure	<b>/</b>	<b>✓</b>
ESC(#	Select Symbol Set	<b>√</b>	<b>✓</b>
ESC(#X	Select Font by ID	<b>/</b>	<b>√</b>
ESC(3@	Select Default Primary Font	<b>/</b>	<b>✓</b>
ESC(f#W[data]	Define Symbol Set	<b>√</b>	<b>√</b>
ESC(s#B	Select Stroke Weight	<b>√</b>	<b>✓</b>
ESC(s#H	Select Pitch	<b>√</b>	✓
ESC(s#P	Select Spacing	<b>√</b>	<b>√</b>
ESC(s#S	Select Style	<b>√</b>	✓
ESC(s#T	Select Typeface	<b>√</b>	<u> </u>
ESC(s#V	Select Point Size	·	
ESC(s#W[data]	Load Character	·	
ESC)#	Secondary Font Symbol Set	x	×

√ = Supported  X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
ESC)#X	Select Secondary Download Font (by Font ID)	Х	х
ESC)3@	Select Default Secondary Font	✓	<b>√</b>
ESC)s#B	Secondary Font Stroke Weight	х	х
<sup>ESC</sup> )s#H	Secondary Font Pitch	х	х
ESC)s#P	Secondary Font Spacing	х	х
<sup>ESC</sup> )s#S	Secondary Font Style	x	x
<sup>ESC</sup> )s#T	Secondary Font Typeface Selection	х	х
<sup>ESC</sup> )s#V	Secondary Font Height (Point Size)	х	х
ESC)s#W[data]	Load Font Header	<b>√</b>	<b>√</b>
ESC*b#M	Set Raster Compression Mode	<b>√</b>	<b>√</b>
ESC*b#V[data]	Transfer Raster Data (Plane)	<b>√</b>	<b>√</b>
ESC*b#W[data]	Transfer Raster Data (Row/Block)	<b>√</b>	<b>√</b>
ESC*b#Y	Y Offset	<b>√</b>	<b>√</b>
ESC*c#A	Horizontal Rectangle Size (in PCL Units)	<b>√</b>	<b>✓</b>
ESC*c#B	Vertical Rectangle Size (in PCL Units)	<b>√</b>	<b>√</b>
ESC*c#D	Set Font ID	✓	<b>√</b>
ESC*c#E	Set Character Code	<b>√</b>	<b>√</b>
ESC*c#F	Font Control	<b>√</b>	<b>√</b>
ESC*c#G	Area Fill ID	✓	<b>√</b>
ESC*c#H	Horizontal Rectangle Size (in Decipoints)	<b>√</b>	<b>√</b>
ESC*c#K	Horizontal Plot Size (in Inches)	<b>✓</b>	<b>√</b>
ESC*c#L	Vertical Plot Size (in Inches)	<b>√</b>	<b>√</b>
ESC*C#P	Fill Rectangular Area	<b>√</b>	<b>√</b>
ESC*c#Q	Pattern Control	<b>√</b>	<b>√</b>
ESC*c#R	Symbol Set ID Code	<b>√</b>	<b>√</b>
ESC*c#S	Symbol Set Control	<b>√</b>	<b>√</b>

√ = Supported X = Not supported		Printer m	Printer model	
Command	Function	C925de, C925dte	X925de	
ESC*cOT	Set Picture Frame Anchor Point	<b>√</b>	<b>√</b>	
ESC*C#V	Vertical Rectangle Size (in Decipoints)	<b>✓</b>	<b>✓</b>	
ESC*c#W[data]	Define Pattern	<b>✓</b>	<b>√</b>	
ESC*c#X	Picture Frame Horizontal Size (in Decipoints)	<b>✓</b>	<b>✓</b>	
ESC*C#Y	Picture Frame Vertical Size (in Decipoints)	<b>✓</b>	<b>√</b>	
ESC* L#O	Logical Operation	<b>✓</b>	<b>√</b>	
ESC* <b>ℓ</b> #R	Pixel Placement	<b>✓</b>	<b>√</b>	
<sup>ESC</sup> * <b>ℓ</b> #W[data]	Color Lookup Tables	х	х	
ESC*m#W[data]	Download Dither Matrix	<b>✓</b>	<b>√</b>	
ESC*o#M(b)	Print Quality	х	Х	
ESC*o#Q	Mechanical Print Quality	х	Х	
ESC*o#W[data]	Driver Configuration	<b>✓</b>	<b>√</b>	
ESC*p#P	Push/Pop Palette	<b>✓</b>	<b>√</b>	
ESC*p#R	Set Pattern Reference Point	<b>✓</b>	<b>√</b>	
ESC*p#X	Set Horizontal Cursor Position (in PCL Units)	<b>✓</b>	<b>✓</b>	
ESC*p#Y	Set Vertical Cursor Position (in PCL Units)	<b>✓</b>	<b>√</b>	
ESC*r#A	Start Raster Graphics	<b>✓</b>	<b>✓</b>	
ESC*r#F	Raster Graphics Presentation	<b>✓</b>	<b>√</b>	
ESC*r#S	Raster Width (Source)	<b>√</b>	<b>√</b>	
ESC*r#T	Raster Height (Source)	<b>/</b>	<b>√</b>	
ESC*r#U	Simple Color	<b>/</b>	<b>√</b>	
ESC*rB	End Raster Graphics (Version B)	<b>/</b>	<b>√</b>	
ESC*rC	End Raster Graphics (Version C)	/	<b>√</b>	
ESC*s#I	Inquire Status Readback Entity	/	<b>√</b>	
ESC*s1M	Free Space	<b>✓</b>	<b>✓</b>	

√ = Supported  X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
ESC*s#T	Set Status Readback Location Type	<b>✓</b>	<b>✓</b>
ESC*s#U	Set Status Readback Location Unit	<b>✓</b>	<b>√</b>
ESC*s#X	Echo	<b>√</b>	<b>√</b>
ESC*t#H	Raster Width (Destination)	<b>√</b>	<b>√</b>
ESC*t#I	Gamma Correction	<b>✓</b>	<b>√</b>
ESC*t#J	Render Algorithm	х	х
ESC*t#K	Scale Algorithm	х	х
ESC*t#R	Set Resolution	<b>✓</b>	<b>√</b>
ESC*t#V	Raster Height (Destination)	<b>√</b>	<b>√</b>
ESC*g#W	Set Raster Configuration	х	х
ESC*v#A	Color Component One	<b>✓</b>	<b>√</b>
ESC*v#B	Color Component Two	✓	<b>√</b>
ESC*v#C	Color Component Three	<b>√</b>	<b>√</b>
ESC*v#I	Assign Color Index	<b>✓</b>	<b>√</b>
ESC*v#N	Source Transparency Mode	<b>√</b>	<b>√</b>
ESC*v#O	Pattern Transparency Mode	<b>✓</b>	<b>√</b>
ESC*v#S	Foreground Color	<b>✓</b>	<b>√</b>
ESC*v#T	Select Current Pattern	<b>✓</b>	<b>√</b>
ESC*v#W[data]	Configure Image Data	<b>✓</b>	<b>√</b>
<sup>ESC</sup> *i#W[data]	Viewing Illuminant	х	х
ESC9	Clear Horizontal Margins	✓	<b>√</b>
ESC <sub>=</sub>	Half Line-Feed	✓	<b>√</b>
ESC%#A	Enter HP PCL 5 Mode	<b>√</b>	<b>√</b>
ESC%#B	Enter HP-GL/2 Mode	<b>✓</b>	<b>√</b>
	<b>Note:</b> The values -1, 2, and 3 are not supported by any of the printers included in this document.	· 	
ESC%-12345X	Universal Exit Language (UEL) / Start of PJL	<b>✓</b>	<b>✓</b>

## **GL/2** commands

√ = Supported  X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
AA	Arc Absolute	✓	<b>√</b>
AC	Anchor Corner	✓	<b>√</b>
AD	Define Alternate Font	✓	<b>√</b>
AR	Arc Relative	✓	<b>✓</b>
AT	Arc Absolute Three Point	<b>√</b>	<b>√</b>
BR	Bezier Relative	✓	<b>√</b>
BZ	Bezier Absolute	✓	<b>√</b>
CF	Character Fill	✓	<b>✓</b>
CI	Circle	✓	<b>√</b>
со	Comment	✓	<b>√</b>
СР	Character Plot	✓	<b>√</b>
CR	Color Range	✓	<b>√</b>
DF	Default	✓	<b>✓</b>
DI	Absolute Direction	✓	<b>√</b>
DR	Relative Direction	✓	<b>√</b>
DT	Define Label Terminator	<b>✓</b>	<b>✓</b>
DV	Define Variable Text Path	<b>✓</b>	<b>✓</b>
EA	Edge Rectangle Absolute	✓	<b>✓</b>
EP	Edge Polygon	<b>✓</b>	<b>√</b>
ER	Edge Rectangle Relative	<b>✓</b>	<b>✓</b>
ES	Extra Space	<b>✓</b>	<b>✓</b>
EW	Edge Wedge	<b>✓</b>	<b>✓</b>
FI	Primary Font	<b>✓</b>	<b>✓</b>
FN	Secondary Font	<b>✓</b>	<b>✓</b>
FP	Fill Polygon, Odd/Even	<b>✓</b>	<b>√</b>

√ = Supported  X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
FP	Fill Polygon, Non-Zero Winding	<b>✓</b>	<b>✓</b>
FT	Fill Type	<b>✓</b>	<b>√</b>
FT	Fill Type - 22	<b>√</b>	<b>√</b>
FT	Fill Type - 9	✓	<b>√</b>
IN	Initialize	✓	<b>√</b>
IP	Input P1 and P2	✓	<b>√</b>
IR	Input Relative P1 and P2	✓	<b>√</b>
IW	Input Window	<b>√</b>	<b>√</b>
LA	Line Attributes	✓	<b>√</b>
LB	Label, Default Terminator = '03'x	✓	<b>√</b>
LO	Label Origin	<b>√</b>	<b>√</b>
LO	Uses PCL Label Origin	<b>√</b>	<b>√</b>
LT	Line Type	<b>√</b>	<b>√</b>
LM	Label Mode	х	х
МС	Logical Operation	<b>✓</b>	<b>√</b>
NP	Number of Pens	<b>✓</b>	<b>√</b>
PA	Plot Absolute	<b>✓</b>	<b>√</b>
PC	Pen Color	<b>✓</b>	<b>√</b>
PD	Pen Down	✓	<b>√</b>
PE	Polyline Encoded	✓	<b>√</b>
PM	Polygon Mode	<b>✓</b>	<b>√</b>
PP	Pixel Placement	<b>✓</b>	<b>√</b>
PR	Plot Relative	<b>✓</b>	<b>√</b>
PU	Pen Up	<b>✓</b>	<b>√</b>
PW	Pen Width	✓	<b>√</b>
RA	Fill Rectangle Absolute	<b>✓</b>	<b>√</b>
RF	Define Raster Fill	✓	<b>√</b>

√ = Supported  X = Not supported		Printer model	
Command	Function	C925de, C925dte	X925de
RO	Rotate Coordinate System	✓	<b>✓</b>
RR	Fill Rectangle Relative	<b>✓</b>	<b>√</b>
RT	Arc Relative Three Point	<b>✓</b>	<b>√</b>
SA	Select Alternate Font	<b>✓</b>	<b>√</b>
SB	Scalable/Bitmapped Fonts	<b>✓</b>	<b>√</b>
SC	Scale	<b>✓</b>	<b>√</b>
SD	Define Standard Font	<b>✓</b>	<b>√</b>
SI	Absolute Character Size	<b>√</b>	<b>√</b>
SL	Character Slant	<b>√</b>	<b>√</b>
SM	Symbol Mode	<b>✓</b>	<b>✓</b>
SP	Select Pen	<b>✓</b>	<b>✓</b>
SR	Relative Character Size	<b>✓</b>	<b>√</b>
SS	Select Standard Font	<b>✓</b>	<b>√</b>
SV	Screened Vectors	✓	<b>√</b>
SV	Screened Vectors - 9, level	<b>√</b>	<b>√</b>
TD	Transparent Data	✓	<b>√</b>
TM	Threshold Matrix	<b>✓</b>	<b>√</b>
TR	Transparency Mode	✓	<b>√</b>
UL	User Defined Line	<b>√</b>	<b>✓</b>
WG	Fill Wedge	✓	<b>✓</b>
WU	Pen Width Units	<b>✓</b>	<b>✓</b>

Appendix B: PJL support 31

# **Appendix B: PJL support**

## **Common variables for both printer languages**

✓ = Supported			
X = Not supported	Printer r	Printer model	
Variable name	C925de, C925dte	X925de	
AUTOCONT	<b>√</b>	<b>✓</b>	
AUTOSELECT	Х	Х	
BINDING	<b>✓</b>	<b>✓</b>	
BITSPERPIXEL	Х	X	
CLEARABLEWARNINGS	<b>✓</b>	<b>✓</b>	
CONTEXTSWITCH	Х	X	
COPIES	<b>✓</b>	<b>✓</b>	
CPLOCK	✓	<b>✓</b>	
DENSITY	✓	<b>✓</b>	
DISKLOCK	Х	х	
DUPLEX	<b>✓</b>	<b>✓</b>	
ECONOMODE	Х	х	
FORMATTERNUMBER	<b>✓</b>	<b>✓</b>	
FORMLINES	✓	<b>✓</b>	
HELDJOBTIMEOUT	✓	<b>✓</b>	
HOLD	✓	<b>✓</b>	
HOLDKEY	✓	<b>✓</b>	
HOLDTYPE	✓	<b>✓</b>	
IMAGEADAPT	Х	Х	
INTRAY1	Х	х	
INTRAY2	✓	<b>✓</b>	
INTRAY3	✓	<b>✓</b>	
INTRAY4	<b>√</b>	<b>√</b>	
INTRAY5	<b>√</b>	<b>✓</b>	

√ = Supported		
X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
INTRAY1SIZE	✓	✓
INTRAY2SIZE	<b>\</b>	<b>✓</b>
INTRAY3SIZE	<b>√</b>	<b>✓</b>
INTRAY4SIZE	<b>√</b>	<b>✓</b>
INTRAY5SIZE	<b>✓</b>	✓
IOBUFFER	х	х
IOSIZE	х	Х
JOBATTR	х	х
JOBNAME	<b>√</b>	✓
JOBOFFSET	х	х
LANG	<b>✓</b>	<b>√</b>
LOWTONER	<b>✓</b>	<b>✓</b>
MANUALFEED	<b>✓</b>	<b>✓</b>
MEDIASOURCE	х	х
MEDIATYPE	<b>✓</b>	✓
MPTRAY	<b>\</b>	<b>\</b>
ORIENTATION	<b>✓</b>	<b>✓</b>
OUTBIN	<b>√</b>	<b>√</b>
PAGEPROTECT	✓	<b>√</b>
PAPER	<b>✓</b>	<b>√</b>
PARALLEL	<b>√</b>	✓
PASSWORD	✓	✓
PERSONALITY	<b>✓</b>	<b>✓</b>
POWERSAVE	✓	✓
POWERSAVETIME	✓	✓
PRINTQUALITY	х	х
QTY	<b>√</b>	<b>√</b>
RENDERMODE	х	х

√ = Supported  X = Not supported	Printer r	Printer model	
Variable name	C925de, C925dte	X925de	
REPEATJOBTIMEOUT		<b>✓</b>	
REPRINT		<b>✓</b>	
RESERVEJOBTIMEOUT	<b>√</b>	<b>✓</b>	
RESOLUTION	<b>√</b>	<b>✓</b>	
RESOURCESAVE		<b>✓</b>	
RESOURCESAVESIZE	x	x	
RET	х	х	
STRINGCODESET	✓	<b>√</b>	
TIMEOUT	✓	<b>√</b>	
USERNAME	✓	<b>√</b>	
VERIFYJOBTIMEOUT	<b>✓</b>	<b>√</b>	
WIDEA4	✓	<b>√</b>	

## **Lexmark-unique PJL variables for both printer languages**

√ = Supported		
X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
LACTIVEBINRESET	x	х
LADVANCEDSTATUS	✓	✓
LALARMCONTROL	<b>✓</b>	<b>√</b>
LAUTOCRLF	<b>✓</b>	✓
LAUTOLFCR	<b>✓</b>	✓
LBAYERSCREENLIMIT	<b>✓</b>	<b>✓</b>
LBLANKPAGES	<b>✓</b>	✓
LBONDLENGTH	x	х
LBONDLOADING	<b>✓</b>	<b>✓</b>
LBONDOUTBIN	x	х
LBONDTEXTURE	х	Х

√ = Supported  X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
LBONDWEIGHT		<b>√</b>
LBOTTOMMARGINOFFSET	X	X
LBWLOCK		<b>√</b>
LCANCEL	<b>√</b>	
LCARDSTOCKLENGTH	X	X
LCARDSTOCKLOADING	х	х
LCARDSTOCKOUTBIN	х	х
LCARDSTOCKTEXTURE	x	х
LCARDSTOCKWEIGHT	✓	<b>✓</b>
LCOLLATION	✓	<b>√</b>
LCOLORBALANCEBLACK	✓	<b>√</b>
LCOLORBALANCECYAN	✓	<b>√</b>
LCOLORBALANCEMAGENTA	✓	<b>√</b>
LCOLORBALANCEYELLOW	✓	<b>√</b>
LCOLORCORRECTION	✓	<b>√</b>
LCOLOREDLENGTH	х	х
LCOLOREDLOADING		<b>√</b>
LCOLOREDOUTBIN	х	х
LCOLOREDTEXTURE	x	х
LCOLOREDWEIGHT	✓	<b>√</b>
LCOLORMODEL	✓	<b>√</b>
LCOLORSAVER	✓	<b>√</b>
LCOLORTRAPPING	✓	<b>√</b>
LCUSTOMPAPERUNITS	✓	<b>√</b>
LCUSTOMPAPERWIDTH	✓	<b>√</b>
LCUSTOMPAPERHEIGHT	✓	<b>√</b>
LCUSTOMPAPERFEED	✓	<b>√</b>
LCUSTOMTYPE1LENGTH	х	Х

√ = Supported		
X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
LCUSTOMTYPE1LOADING	<b>√</b>	✓
LCUSTOMTYPE1MEDIA	✓	✓
LCUSTOMTYPE1NAME	✓	✓
LCUSTOMTYPE1OUTBIN	х	х
LCUSTOMTYPE1TEXTURE	x	X
LCUSTOMTYPE1WEIGHT	<b>✓</b>	✓
LCUSTOMTYPE2LENGTH	х	х
LCUSTOMTYPE2LOADING	✓	✓
LCUSTOMTYPE2MEDIA	<b>✓</b>	<b>✓</b>
LCUSTOMTYPE2NAME	<b>✓</b>	<b>√</b>
LCUSTOMTYPE2OUTBIN	х	х
LCUSTOMTYPE2TEXTURE	x	x
LCUSTOMTYPE2WEIGHT	<b>✓</b>	<b>✓</b>
LCUSTOMTYPE3LENGTH	X	х
LCUSTOMTYPE3LOADING	✓	✓
LCUSTOMTYPE3MEDIA	<b>✓</b>	<b>√</b>
LCUSTOMTYPE3NAME	<b>✓</b>	<b>√</b>
LCUSTOMTYPE3OUTBIN	х	х
LCUSTOMTYPE3TEXTURE	x	x
LCUSTOMTYPE3WEIGHT	<b>✓</b>	<b>✓</b>
LCUSTOMTYPE4LENGTH	x	х
LCUSTOMTYPE4LOADING	<b>✓</b>	<b>✓</b>
LCUSTOMTYPE4MEDIA	<b>√</b>	<b>√</b>
LCUSTOMTYPE4NAME	<b>√</b>	<b>√</b>
LCUSTOMTYPE4OUTBIN	х	х
LCUSTOMTYPE4TEXTURE	х	х
LCUSTOMTYPE4WEIGHT	<b>✓</b>	<b>✓</b>
LCUSTOMTYPE5LENGTH	x	х
LCUSTOMTYPE5LOADING	✓	✓ ✓

√ = Supported  X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
LCUSTOMTYPE5MEDIA	<b>√</b>	<b>√</b>
LCUSTOMTYPE5NAME	<b>√</b>	<u> </u>
LCUSTOMTYPE5OUTBIN	X	X
LCUSTOMTYPE5TEXTURE	Х	х
LCUSTOMTYPE5WEIGHT	<b>√</b>	<b>√</b>
LCUSTOMTYPE6LENGTH	х	х
LCUSTOMTYPE6LOADING	✓	<b>✓</b>
LCUSTOMTYPE6MEDIA	<b>√</b>	<b>√</b>
LCUSTOMTYPE6NAME	<b>√</b>	<b>√</b>
LCUSTOMTYPE6OUTBIN	Х	х
LCUSTOMTYPE6TEXTURE	Х	Х
LCUSTOMTYPE6WEIGHT	<b>√</b>	<b>√</b>
LDOWNLOADTARGET	<b>√</b>	<b>√</b>
LDRYTIMEDELAY	х	х
LDUPLEXLEFTMARGINOFFSET	х	Х
LDUPLEXTOPMARGINOFFSET	х	х
LDUPLICATEHELDJOBS	✓	<b>✓</b>
LECOMODE	✓	<b>✓</b>
LENVELOPEENHANCE	х	Х
LENVELOPELENGTH	х	х
LENVELOPEOUTBIN	X	х
LENVELOPETEXTURE	X	X
LENVELOPEWEIGHT	✓	<b>√</b>
LESCCHAR	✓	<b>√</b>
LFAXFOLD	х	х
LFAXJOBWAITFORTONER	х	<b>✓</b>
LFAXREDIAL	х	<b>√</b>
LFAXREDIALFREQUENCY	х	<b>√</b>
LFAXRESOLUTION	х	<b>√</b>

√ = Supported		
X = Not supported	Printer r	model
Variable name	C925de, C925dte	X925de
LFAXTRANSMISSIONLOG	X	<b>✓</b>
LFOLD	Х	Х
LFEEDERPAPERTYPE	x	Х
LGLOSSYLOADING	✓	✓
LGLOSSYOUTBIN	Х	х
LGLOSSYTEXTURE	X	X
LGLOSSYWEIGHT	<b>√</b>	<b>✓</b>
LHEAVYGLOSSYLOADING	✓	<b>√</b>
LHEAVYGLOSSYOUTBIN	Х	х
LHEAVYGLOSSYTEXTURE	Х	х
LHEAVYGLOSSYWEIGHT	<b>√</b>	<b>√</b>
LHEAVYPAPERLOADING	✓	<b>√</b>
LHEAVYPAPEROUTBIN	Х	х
LHEAVYPAPERTEXTURE	X	х
LHEAVYPAPERWEIGHT	✓	✓
LHELDJOBPRTORDER	✓	<b>√</b>
LHOLEPUNCHALARM	х	х
LHOLEPUNCHMODE	x	х
LHONORINIT	<b>√</b>	<b>√</b>
LIMAGEESS	✓	<b>√</b>
LIMAGEBRIGHTNESS	Х	Х
LIMAGECONTRAST	✓	<b>√</b>
LIMAGEENHANCE	Х	Х
LIMAGEENHANCETYPE	х	х
LIMAGEORIENTATION	✓	<b>√</b>
LIMAGESATURATION	✓	<b>√</b>
LIMAGESMOOTHING	✓	<b>√</b>
LINFEEDER	х	Х
LINFEEDERSIZE	Х	Х

√ = Supported		
X = Not supported	Printer r	model
Variable name	C925de, C925dte	X925de
LINKALERT	х	х
LINMPFEEDERSIZE	✓	✓
LJAMRECOVERY	<b>✓</b>	✓
LIOBPARKPERSIST	✓	<b>√</b>
LJOBWAITFORSUPPLIES	✓	<b>√</b>
LLABELSLENGTH	х	х
LLABELSLOADING	х	х
LLABELSOUTBIN	х	х
LLABELSTEXTURE	Х	х
LLABELSWEIGHT	<b>✓</b>	✓
LLASTTRAYRENUMBER	<b>√</b>	<b>✓</b>
LLEFTMARGINOFFSET	х	х
LLETTERHEADLENGTH	х	х
LLETTERHEADLOADING	<b>✓</b>	<b>✓</b>
LLETTERHEADOUTBIN	х	х
LLETTERHEADTEXTURE	х	х
LLETTERHEADWEIGHT	✓	✓
LLIGHTPAPERLOADING	<b>√</b>	✓
LLIGHTPAPEROUTBIN	х	х
LLIGHTPAPERTEXTURE	Х	х
LLIGHTPAPERWEIGHT	<b>✓</b>	✓
LLINEDETAIL	<b>✓</b>	✓
LMANUALCOLORRGBTEXT	✓	<b>✓</b>
LMANUALCOLORRGBGRAPHICS	✓	<b>√</b>
LMANUALCOLORRGBIMAGE	✓	<b>√</b>
LMANUALCOLORCMYKTEXT	✓	<b>√</b>
LMANUALCOLORCMYKGRAPHICS	✓	<b>√</b>
LMANUALCOLORCMYKIMAGE	✓	<b>✓</b>
LMANUALENVELOPESIZE	✓	<b>✓</b>

✓ = Supported	Deinter	Printer model	
X = Not supported  Variable name	C925de, C925dte	X925de	
LMANUALENVELOPETYPE	€923ue, €923ute	<b>√</b>	
LMANUALPAPERSIZE	,	<u> </u>	
	<b>√</b>	<b>√</b>	
LMANUALPAPERTYPE	<b>√</b>	<b>√</b>	
MICRJOB	X	Х	
LMAXSTATUSMSG	X	Х	
LMPFEEDERPAPERTYPE	✓	<b>✓</b>	
LMPFEEDERRENUMBER	✓	✓	
LMULTIPAGEBORDER	<b>√</b>	<b>√</b>	
LMULTIPAGEORDER	<b>√</b>	<b>√</b>	
LMULTIPAGEPRINT	<b>√</b>	<b>√</b>	
LMULTIPAGEVIEW	✓	<b>√</b>	
LNPAP	<b>√</b>	<b>√</b>	
LOPTIONALOUTBIN1NAME	Х	Х	
LOPTIONALOUTBIN2NAME	Х	Х	
LOPTIONALOUTBIN3NAME	Х	х	
LOPTIONALOUTBIN4NAME	Х	х	
LOPTIONALOUTBIN5NAME	X	X	
LOPTIONALOUTBIN6NAME	X	X	
LOPTIONALOUTBIN7NAME	X	X	
LOPTIONALOUTBIN8NAME	X	X	
LOPTIONALOUTBIN9NAME	X	X	
LOPTIONALOUTBIN10NAME	X	X	
LOUTBINCONFIG	X	X	
LOVERFLOWOUTBIN	X	X	
LOVERFLOWTIMER	Х	х	
LPAGECOUNT	✓	<b>√</b>	
LPAGEMODE	✓	<b>√</b>	
LPAPERSOURCE	✓	<b>√</b>	
LPICTUREGRADE	х	х	
LPLAINLENGTH	х	Х	

√ = Supported			
X = Not supported	Printer i	Printer model	
Variable name	C925de, C925dte	X925de	
LPLAINOUTBIN	Х	Х	
LPLAINTEXTURE	X	Х	
LPLAINWEIGHT	✓	✓	
LPOWERSAVER	✓	<b>✓</b>	
LPPDS	✓	<b>√</b>	
LPPDSFORMLINES	<b>√</b>	<b>√</b>	
LPPDSLINESPERINCH	<b>✓</b>	<b>√</b>	
LPREPRINTEDLENGTH	X	X	
LPREPRINTEDLOADING	<b>✓</b>	<b>✓</b>	
LPREPRINTEDOUTBIN	Х	х	
LPREPRINTEDTEXTURE	X	х	
LPREPRINTEDWEIGHT	<b>✓</b>	<b>✓</b>	
LPRINTBUFFER	✓	<b>√</b>	
LPRINTSCREENS	✓	<b>√</b>	
LPRINTHEADIDLETIME	Х	х	
LPRINTERUSAGE	✓	<b>√</b>	
LPRINTMENUSBUTTON	Х	х	
LPRINTQUALITY	X	X	
LPUNCH	X	X	
LQUIETMODE	<b>√</b>	<b>√</b>	
LREAROUTBINNAME	X	X	
LRECYCLEDLOADING	<b>√</b>	<b>√</b>	
LRECYCLEDMEDIA	✓	<b>√</b>	
LRECYCLEDOUTBIN	х	х	
LRECYCLEDTEXTURE	х	х	
LRECYCLEDWEIGHT	✓	<b>√</b>	
LREPEATPRINTLIMIT	✓	<b>√</b>	
LRESET	✓	✓	
LRESOURCESAVE	<b>√</b>	<b>√</b>	

√ = Supported			
X = Not supported	Printer m		
Variable name	C925de, C925dte	X925de	
LRIGHTMARGINOFFSET	Х	X	
LROUGHENVELOPELOADING	Х	X	
LROUGHENVELOPEOUTBIN	Х	Х	
LROUGHENVELOPETEXTURE	Х	X	
LROUGHENVELOPEWEIGHT	✓	✓	
LROUGHPAPERLOADING	✓	✓	
LROUGHPAPEROUTBIN	х	x	
LROUGHPAPERTEXTURE	х	х	
LROUGHPAPERWEIGHT	✓	✓	
LSCREENING	X	X	
LSEPARATORSHEETS	✓	<b>√</b>	
LSEPARATORSOURCE	✓	<b>✓</b>	
LSMALLFONTENHANCER	х	Х	
LSSGALVO	х	X	
LSTANDARDOUTBINNAME	✓	<b>✓</b>	
LSTAPLE	х	X	
LSTAPLESEMPTYALARM	х	X	
LSTAPLETESTBIN	х	X	
LSTAPLETESTSOURCE	x	X	
LSTROKEWIDTH	✓	<b>✓</b>	
LSUBSTITUTESIZE	✓	<b>✓</b>	
LTOPBINROTATE	х	X	
LTOPMARGINOFFSET	х	X	
LTRANSPARENCYLENGTH	Х	Х	
LTRANSPARENCYOUTBIN	Х	Х	
LTRANSPARENCYTEXTURE	Х	Х	
LTRANSPARENCYWEIGHT	✓	<b>✓</b>	
LTRAY1AUTOSIZE	✓	<b>✓</b>	
LTRAY2AUTOSIZE	✓	<b>√</b>	
LTRAY3AUTOSIZE	✓	<b>✓</b>	

√ = Supported		
X = Not supported	Printer n	nodel
Variable name	C925de, C925dte	X925de
LTRAY4AUTOSIZE	✓	✓
LTRAY5AUTOSIZE	✓	<b>/</b>
LTRAY1PAPERTYPE	✓	<b>✓</b>
LTRAY2PAPERTYPE	<b>√</b>	<b>✓</b>
LTRAY3PAPERTYPE	✓	<b>✓</b>
LTRAY4PAPERTYPE	✓	<b>✓</b>
LTRAY5PAPERTYPE	✓	<b>✓</b>
LTRAY1RENUMBER	✓	<b>✓</b>
LTRAY1SENSEDTYPEPAPER	х	х
LTRAY1SENSEDTYPETRANSPARENCY	x	х
LTRAY2SENSEDTYPEPAPER	x	х
LTRAY2SENSEDTYPETRANSPARENCY	x	х
LTRAY3SENSEDTYPEPAPER	x	х
LTRAY3SENSEDTYPETRANSPARENCY	x	х
LTRAY4SENSEDTYPEPAPER	x	Х
LTRAY4SENSEDTYPETRANSPARENCY	х	х
LTRAYINSERTMESSAGEDELAY	✓	<b>✓</b>
LTYPE1FONTS	✓	<b>✓</b>
LUSDEFAULTS	✓	<b>√</b>
LVINYLLABELSLOADING	✓	<b>✓</b>
LVINYLLABELSOUTBIN	Х	х
LVINYLLABELSTEXTURE	Х	х
LVINYLLABELSWEIGHT	✓	<b>✓</b>
LWRITECOVERAGE	✓	<b>√</b>

#### **Common variables for PCL emulation**

√ = Supported X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
FONTNUMBER	<b>✓</b>	<b>✓</b>
FONTSOURCE	<b>✓</b>	<b>√</b>
PITCH	<b>✓</b>	<b>√</b>
PTSIZE	<b>✓</b>	<b>✓</b>
SYMSET	<b>✓</b>	<b>✓</b>

# **Lexmark-unique variables for PCL emulation**

✓ = Supported	Printer m	and al
X = Not supported  Variable name	C925de, C925dte	X925de
LA4WIDTH	/	<b>√</b>
LASSIGNFEEDER	X	X
LASSIGNMANUALENVELOPE	✓	<b>√</b>
LASSIGNMANUALPAPER	<b>√</b>	<b>√</b>
LASSIGNMPFEEDER	<b>√</b>	<b>√</b>
LASSIGNTRAY1	<b>√</b>	<b>✓</b>
LASSIGNTRAY2	/	<b>√</b>
LASSIGNTRAY3	√ ·	✓
LASSIGNTRAY4	<b>√</b>	<b>√</b>
LASSIGNTRAY5		✓
LBITMAPROUNDING	<i></i>	✓
LCOLOREXTENSIONS	· /	<u>·</u> ✓
LFONTCOMPATIBILITY	· /	
LFONTPRIORITY	· ✓	<b>✓</b>

### **Common variables for PostScript emulation**

√ = Supported  X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
JAMRECOVERY	<b>✓</b>	<b>✓</b>
PRTPSERRS	<b>✓</b>	<b>✓</b>
ADOBEMBT	х	x

### Lexmark-unique variables for PostScript emulation

√ = Supported  X = Not supported		
X = Not supported	Printer model	
Variable name	C925de, C925dte	X925de
LPICTUREGRADE	x	x
LPSFONTPRIORITY	<b>✓</b>	✓

### **Lexmark-unique LRESOURCE variables**

√ = Supported  X = Not supported	Printer model	
Variable name	C925de, C925dte X925de	
LDESCRIPTION	<b>√</b>	✓
LRWLOCK	<b>✓</b>	<b>√</b>
LWLOCK	<b>✓</b>	✓

#### **Status Readback commands**

√ = Supported  X = Not supported	Printer	model
Command		
Command	C925de, C925dte	X925de
DINQUIRE	✓	<b>✓</b>
ЕСНО	<b>✓</b>	<b>✓</b>
INFO	<b>✓</b>	<b>✓</b>
INQUIRE	<b>✓</b>	<b>✓</b>

√ = Supported			
X = Not supported	Printer model		
Command	C925de, C925dte	X925de	
USTATUS	<b>✓</b>	<b>✓</b>	
USTATUSOFF	<b>✓</b>	<b>✓</b>	

#### **USTATUS** unsolicited status variables

√ = Supported  X = Not supported	Printer model		
Variable name	C925de, C925dte	X925de	
DEVICE	<b>✓</b>	<b>√</b>	
JOB	<b>✓</b>	<b>√</b>	
PAGE	<b>✓</b>	<b>√</b>	
TIMED	✓	<b>√</b>	

## PJL messages for auto-continuable conditions

√ = Supported  X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - PPDS Font Error	30014	50 PPDS font error	<b>✓</b>	<b>√</b>
Intervention Required - Insufficient Collation Area	30016	37 Insufficient Collation Area	х	х
Intervention Required - Insufficient Defragment Memory	30016	37 Insufficient Defrag Memory	х	х
Intervention Required - Insufficient Memory	30016	37 Insufficient memory, some Held Jobs were deleted	<b>✓</b>	<b>✓</b>
Intervention Required - Insufficient Defragment Memory	30016	37 Insufficient memory, some Held Jobs were deleted	Х	X

√ = Supported X = Not supported			Printer	model
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Insufficient Defragment Memory	30016	37 Insufficient memory, some Held Jobs will not be restored	х	х
Intervention Required - Insufficient Defragment Memory	30016	37 Insufficient memory for Flash Memory Defragment operation	<b>✓</b>	<b>√</b>
Intervention Required - Insufficient Collation Area	30016	37 Insufficient memory to collate job	<b>√</b>	<b>√</b>
Intervention Required - Memory Full	30016	38 Memory full	<b>√</b>	<b>√</b>
Intervention Required - Configuration Change	30016	57 Configuration Change	х	х
Intervention Required - Held Jobs May Not Be Restored (57 Configuration Change)	30016	57 Configuration change, some held jobs were not restored	<b>√</b>	<b>√</b>
Intervention Required - Held Jobs May Not Be Restored	30016	Held Jobs May Not Be Restored	х	х
Intervention Required - Held Jobs May Not Be Restored	30016	Some held jobs were not restored	<b>√</b>	<b>√</b>
Intervention Required - Held Jobs May Not Be Restored	30016	37 Insufficient memory, some held jobs will not be restored	<b>√</b>	<b>√</b>
Intervention Required - Complex Page	30017	39 Complex page, some data may not have printed	<b>√</b>	<b>√</b>
Intervention Required - Parallel Error	30018	54 Parallel Error	х	Х
Intervention Required - Serial Option Error	30018	54 Serial option [slot #] error	х	Х
Intervention Required - Standard Serial Error	30018	54 Standard Serial Error	х	х

√ = Supported K = Not supported			Printer	· model
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Standard Network Software Error	30018	54 Standard network software error	<b>√</b>	<b>√</b>
Intervention Required - Standard Serial Fax Connection Lost	30018	54 Std Ser Fax Connection Lost	Х	Х
Intervention Required - Parallel Port Disabled	30018	56 Parallel Port Disabled	х	х
Intervention Required - Parallel Port Error	30018	56 Parallel Port Disabled	х	х
Intervention Required - Serial Option Disabled	30018	56 Serial [slot #] Port Disabled	х	Х
Intervention Required - Standard Serial Disabled	30018	56 Standard Serial Disabled	х	Х
Intervention Required - Standard USB Port Disabled	30018	56 Standard USB port disabled	<b>√</b>	<b>√</b>
Intervention Required - Std Parallel Port Disabled	30018	56 Std Parallel Port Disabled	х	х
Intervention Required - Resource Save Off Deficient Memory	30019	35 Res Save Off Deficient Memory	Х	Х
Intervention Required - Insufficient Fax Buffer	30026	55 Insufficient Fax Buffer	х	х
Intervention Required - Std Par ENA Connection Lost	30027	54 Std Par ENA Connection Lost	х	х
Intervention Required - Standard Parallel Port Disabled	30027	56 Standard Parallel Port Disabled	х	х
Intervention Required - Std Parallel Port Disabled	30027	56 Std Parallel Port Disabled	х	Х
Intervention Required - Resolution Reduced	30029	36 Resolution Reduced	х	Х
Intervention Required - Print Jobs on Disk Request	30031	Print Jobs on Disk? Or Print Jobs on Disk. Go/Stop?	х	х

√ = Supported  X = Not supported			Printer	model
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Restore Held Jobs. Go/Stop?	30031	Restore held jobs?	<b>√</b>	<b>√</b>
Intervention Required - Short Paper	30034	34 Short Paper	х	х
Intervention Required - Short Paper	30034	34 Incorrect paper size, open [source]	<b>√</b>	<b>✓</b>
Intervention Required - Flash Full	30035	52 Flash Full	х	х
Intervention Required - Disk Full	30035	62 Disk Full	х	х
Intervention Required - Defective Flash	30036	51 Defective Flash	х	х
Intervention Required - Unformatted Flash	30036	53 Unformatted Flash	х	х
Intervention Required - Defective Disk	30036	61 Defective Disk	х	x
Intervention Required - Unformatted Disk	30036	63 Unformatted Disk	х	х
Intervention Required - Scheduled Maintenance	30075	80 Scheduled Maintenance	х	х
Intervention Required - Scheduled Maintenance	30075	80 Scheduled maintenance ADF kit	х	х
Intervention Required - Res Save Off Deficient Memory	30076	35 Insufficient memory to support Resource Save feature	<b>✓</b>	<b>√</b>
Intervention Required - Insufficient memory	30076	35 Insufficient memory to support Resource Save feature	х	х
Intervention Required - Resource Save Off Deficient Memory	30076	35 Res Save Off Deficient Memory	х	х
Intervention Required - Insufficient Collation Area	30076	37 Insufficient Collation Area	х	х

√ = Supported  X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Service Required	30095	36 Printer service required	х	х
Intervention Required - Empty Box M	30107	Empty Box M	х	х
Intervention Required - Empty Hole Punch Box	30107	Empty Hole Punch Box	х	х
Intervention Required - Insert Box M	30107	Insert Box M	х	х
Intervention Required - Insert Staple Cartridge	30107	Insert staple cartridge	х	х
Intervention Required - Insert Stapler	30107	Insert Stapler	х	Х
Intervention Required - Priming Failed	30107	Priming Failed, Retry. Go/Stop?	х	Х
Intervention Required - Network [x] Software Error	30112	54 Network [x] software error	<b>√</b>	<b>√</b>
Intervention Required - Serial [x] Fax Connection Lost	30112	54 Ser [x] Fax Connection Lost	х	Х
Intervention Required - Serial Option [x] Error	30112	54 Serial option [x] error	✓	<b>√</b>
Intervention Required - Serial Port [x] Disabled	30112	56 Serial port [x] disabled	<b>√</b>	<b>√</b>
Intervention Required - USB Port [x] Disabled	30112	56 USB port [x] disabled	✓	<b>✓</b>
Intervention Required - Parallel [x] ENA Connection Lost	30113	54 Par [x] ENA Connection Lost	х	Х
Intervention Required - Parallel Port [x] Disabled	30113	56 Parallel port [x] disabled	<b>√</b>	<b>√</b>
Intervention Required - Disk Operation Failed Faxes on Disk	32001	Operation Failed Faxes on Disk	х	Х
Intervention Required - Disk Operation Failed Jobs on Disk	32001	Operation Failed Jobs on Disk	х	X

√ = Supported X = Not supported			Printer	model
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Flash Full	32002	52 Flash Full	х	Х
Intervention Required - Flash Full	32002	52 Not enough free space in flash memory for resources	✓	<b>√</b>
Intervention Required - Disk Full	32002	62 Disk full	<b>✓</b>	<b>✓</b>
Intervention Required - Disk Corrupted	32015	Disk Corrupted	х	Х
Intervention required - Disk Corrupted. Reformat?	32015	Disk Corrupted. Reformat?	х	х
Intervention required - Too Many Bins Attached	32030	58 Too many bins attached	х	Х
Intervention Required - Too Many Flash Options Installed	32030	58 Too Many Flash Options	х	х
Intervention Required - Too Many Flash Options Installed	32030	58 Too many flash options installed	х	х
Intervention Required - Unformatted Flash	32052	53 Unformatted flash detected	<b>√</b>	<b>√</b>
Intervention Required - Unformatted Flash Detected	32052	53 Unformatted Flash detected	х	х
Intervention Required - Unformatted Disk	32052	63 Unformatted disk	х	Х
Intervention Required - Unsupported Disk Format	32052	64 Unsupported Disk Format	х	х
Intervention Required - Defective Flash	32056	51 Defective Flash	х	Х
Intervention Required - Defective Flash	32056	51 Defective flash detected	<b>√</b>	<b>√</b>
Intervention Required - Defective Disk	32056	61 Defective Disk	х	Х

√ = Supported X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Defective Disk	32056	61 Remove defective disk	х	Х
Intervention Required - Scheduled Maintenance	35075	80 Scheduled Maintenance	х	Х
Intervention Required - Scheduled Maintenance	35075	81 Scheduled Maintenance	х	х
Intervention Required - Scheduled Maintenance	40315	81 Scheduled Maintenance [x]	х	Х
Intervention Required - Scheduled Maintenance	40316	81 Scheduled Maintenance [x]	х	Х
Intervention Required - Belt Life Warning	40038	80 Belt Life Warning	х	Х
Intervention Required - Belt Exhausted	40038	80 Belt Exhausted	х	Х
Intervention Required - Fuser Maintenance	40038	80 Fuser Maintenance	х	Х
Intervention Required - Fuser Life Warning	40038	80 Fuser Life Warning	х	х
Intervention Required - Fuser Exhausted	40038	80 Fuser Exhausted	х	х
Intervention Required - Fuser/Belt Life Warning	40038	80 Fuser/Belt Life Warning	х	Х
Intervention Required - Fuser/Belt Exhausted	40038	80 Fuser/Belt Exhausted	х	Х
Intervention Required - ITU Maintenance	40038	83 ITU Maintenance	х	Х
Intervention Required - PJL OP Message	40048	[Pick up text from 'data1' and 'data2' but not 'userMessage1' and 'userMessage2']	<b>√</b>	<b>√</b>
Intervention Required - PJL ST Message	40049	[Pick up text from 'data1' and 'data2' but not 'userMessage1' and 'userMessage2']	<b>√</b>	<b>√</b>

√ = Supported  X = Not supported			Printer	model
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Waste Toner Bottle Nearly Full	40141	82.xx Waste toner bottle nearly full	<b>\</b>	<b>✓</b>
Intervention Required - Photoconductor Low	40204	84.xx [Color] imaging unit low	<b>√</b>	<b>√</b>
Intervention Required - Transfer Module Life Warning	40215	83.xx Transfer module life warning	<b>✓</b>	<b>✓</b>

## PJL messages for attendance conditions

√ = Supported				
X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention required - Disk Corrupted. Reformat?	32015	Disk corrupted	✓	<b>√</b>
Intervention Required - Too Many Bins Attached	32030	58 Too many bins attached	X	Х
Intervention Required - Too Many Flash Options Installed	32030	58 Too many flash options installed	<b>✓</b>	<b>√</b>
Intervention Required - Disk Problem	32052	Disk problem	<b>✓</b>	<b>√</b>
Intervention Required - Remove Defective Disk	32056	61 Remove defective disk	<b>✓</b>	<b>√</b>
Intervention Required - Defective Flash	32056	61 Defective flash detected	х	Х
Intervention Required - Insert Hole Punch Box	40010	Insert Hole Punch Box	х	Х
Intervention Required - Insert PC Cartridge	40010	Insert PC Cartridge	х	Х
Intervention Required - 30 CMYK* Print Unit Missing	40010	30 CMYK* Print Unit Missing	Х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported				
X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - 30 Coating Roll Missing	40010	30 Coating Roll Missing	Х	Х
Intervention Required - Remove Originals from Scanner ADF	40019	Remove originals from the scanner automatic document feeder	х	х
Intervention Required - Remove Paper Standard Bin	40019	Remove paper from standard output bin	<b>√</b>	<b>√</b>
Intervention Required - Install MICR cartridge	40020	Install MICR cartridge	х	х
Intervention Required - Cartridge Life Expired	40021	Cartridge Life Expired CMYK*	х	х
Intervention Required - Cartridge Life Warning	40021	Cartridge Life Warning CMYK*	х	х
Intervention Required - Change Cartridge Invalid Refill	40021	Change Cartridge Invalid Refill	х	х
Intervention Required - Close Cover [x]	40021	Close cover [x]	х	х
Intervention Required - Close Cover [x]	40021	Close paper transport cover	х	х
Intervention Required - Printer Cover Open	40021	Close Cover	х	х
Intervention Required - Close Toner Box Cover	40021	Close Cover	х	х
Intervention Required - Close Deflector G	40021	Close Deflector	х	х
Intervention Required - Close Door	40021	Close Door	х	х
Intervention Required - Close Door [x]	40021	Close door [x]	х	х
Intervention Required - Close Door [x]	40021	Close stapler door	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported  X = Not supported			Printer m	odel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Close Door Insert Cartridge	40021	Close door or insert cartridge	х	х
Intervention Required - Close Finisher Door	40021	Close Finisher Door	х	Х
Intervention Required - Close Finisher Side Door	40021	Close finisher side door	х	Х
Intervention Required - Close Finisher Top Cover	40021	Close finisher top cover	х	Х
Intervention Required - Close Front Door	40021	Close front or side door	<b>√</b>	<b>√</b>
Intervention Required - Close Front Door	40021	Close front door	х	Х
Intervention Required - Close Left Side Door	40021	Close left side door	х	х
Intervention Required - Close Low ADF Door	40021	Close lower automatic feeder door	х	х
Intervention Required - Close Side Door	40021	Close Side Door	х	х
Intervention Required - Close Surface	40021	Close surface H	х	Х
Intervention Required - Close Cover	40021	Close top access	х	х
Intervention Required - Close Cover and Door	40021	Close top access cover and front door	х	х
Intervention Required - Close Door	40021	Close [tray]	✓	<b>√</b>
Intervention Required - Close Tray [x] Top Cover	40021	Close Tray [x] Top Cover	х	Х
Intervention Required - Printer Upper Door Open	40021	Cover Open, Close Top Covers, Close Door, or Insert Cartridge	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported X = Not supported			Printer mo	odel
Message Status code Return string		C925de, C925dte X925de		
Intervention Required - Insert Print Cartridge	40021	Insert Print Cartridge	х	Х
Intervention Required - Open Cover	40021	Open Cover	Х	Х
Intervention Required - Open Rear Door	40021	Open Rear Door	Х	Х
Intervention Required - Invalid Refill	40021	30 Invalid Refill Change Cartridge	х	х
Intervention Required - Defective Ink Cartridge	40021	31 Defective Cartridge CMYK*	х	Х
Intervention Required - Defective Print Cartridge	40021	31 Defective Print Cartridge	х	Х
Intervention Required - Missing Cartridge	40021	31 Missing Cartridge CMYK*	х	Х
Intervention Required - Missing Printhead	40021	31 Missing Printhead	х	Х
Intervention Required - Defective Print Cartridge	40021	31 Replace defective cartridge	х	х
Intervention Required - Invalid Refill	40021	31.xx Invalid refill, change cartridge	X	х
Intervention Required - Defective Print Cartridge	40021	31.xx Replace defective cartridge	Х	х
Intervention Required - Defective Print Cartridge	40021	31.xx Replace defective print cartridge	х	х
Intervention Required - Unsupported Cartridge	40021	32 Unsupported Cartridge	х	Х
Intervention Required - Unsupported CMYK* Cartridge	40021	32 Unsupported CMYK* Cartridge	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported				- 1-1
X = Not supported			Printer m	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required -	40021	32 Unsupported Print Cartridge	X	Х
Unsupported Print Cartridge		Frinc Carcifuge		
Intervention Required -	40021	32 Unsupported	X	x
Unsupported Printhead		Printhead		
Intervention Required -	40021	32.xx Cartridge	X	x
Unsupported Cartridge		part number		
		unsupported by device		
Intervention Required -	40021	40 Tray [x] Size	Х	Х
Tray Size Sense Error		Sense Error		
Intervention Required -	40021	41 Open Bin 1	Х	Х
Open Bin Exit Tray		Exit Tray		
Intervention Required -	40021	42.xy Cartridge	х	х
Cartridge Region		region mismatch		
Mismatch				
Intervention Required -	40022	2xx Paper Jam	X	Х
Paper Jam				
Intervention Required -	40025	Remove	X	Х
Remove Packaging Material		packaging material		
Intervention Required -	40025	Remove	X	X
Remove Packaging	40023	packaging	^	X
Material		material, [area		
		name]		
Intervention Required -	40025	82 Waste toner	X	X
Waste Toner Missing		bottle missing		
Intervention Required -	40025	82.xx Waste	✓	✓
Waste Toner Bottle Missing		missing		
Intervention Required -	40027	Check tray	X	X
Check Tray Connection	75027	[paper source #]	^	^
		connection		
Intervention Required -	40027	Install tray [x]	<b>/</b>	
Install Tray [x] or Cancel			*	•
Job				

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported				
X = Not supported			Printer mo	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Install Tray [x] or Cancel Job	40027	Install Tray [x] or Cancel Job	Х	Х
Intervention Required - Install Envelope Feeder	40028	Install envelope feeder	X	x
Intervention Required - Install Env Feeder or Cancel Job	40028	Install Env Feed or Cancel Job	Х	х
Intervention Required - Reattach Envelope Feeder	40028	Reattach Envelope Feeder	х	х
Intervention Required - Reattach MP Feeder	40028	Reattach MP Feeder	х	Х
Intervention Required - Check Finisher Installation	40029	Check Finisher Installation	х	х
Intervention Required - Check Mailbox Installation	40029	Check Mailbox Installation	х	х
Intervention Required - Install Bin [x] or Cancel Job	40029	Install Bin [x] or Cancel Job	х	х
Intervention Required - Reattach Bin	40029	Reattach bin [x]	х	х
Intervention Required - Reattach Bins	40029	Reattach Bins [bin #x-bin #y]	Х	х
Intervention Required - Reattach Output Bin	40029	Reattach Output Bin [bin #]	х	х
Intervention Required - Tray Config Error	40030	33 Tray [x] Config Error	х	х
Intervention Required - Input Config Error	40030	58 Input config error	<b>√</b>	<b>√</b>
Intervention Required - Too Many Bins Attached	40030	58 Too Many Bins Attached	Х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported  X = Not supported			Printer m	odel
Message	Status code	Return string	C925de, C925dte X925d	
Intervention Required - Too Many Disks Installed	40030	58 Too many disks installed	✓	<b>√</b>
Intervention Required - Too Many Trays Attached	40030	58 Too many trays attached	<b>✓</b>	<b>√</b>
Intervention Required - Too Many Disks Installed	40036	58 Too Many Disks Installed	х	Х
Intervention Required - PerfectFinish Missing	40037	31 PerfectFinish Missing	Х	Х
Intervention Required - PerfectFinish Empty	40037	87 PerfectFinish Empty	Х	Х
Intervention Required - Replace Oil Coating Roll	40038	Replace Oil Coating Roll	х	X
Intervention Required - Replace PC Kit	40038	Replace PC Kit	х	x
Intervention Required - Replace PC Kit To Continue	40038	Replace PC Kit To Continue	х	х
Intervention Required - Replace Toner Cartridge	40038	Replace Toner Cartridge	х	Х
Intervention Required - Replace Toner Cartridge To Continue	40038	Replace Toner To Continue	х	х
Intervention Required - 84 All Photo Devs Exhausted	40038	84 All Photo Devs Exhausted	х	х
Intervention Required - 84 Black Photo Dev Exhausted	40038	84 Black Photo Dev Exhausted	х	х
Intervention Required - 84 Black Photo Dev Life Warning	40038	84 Black Photo Dev Life Warning	х	х
Intervention Required - 84 Color Photo Dev Life Warning	40038	84 Color Photo Dev Life Warning	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported  X = Not supported			Printer mo	ndel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Cartridge Low	40038	88 Cartridge Low	х	Х
Intervention Required - [Color] Cartridge Low	40038	88 [Color] cartridge is low	Х	Х
Intervention Required - Toner Low	40038	88 Cartridge low	х	Х
Intervention Required - Cartridge Low	40038	88 Cartridge Low [CMYK]	х	Х
Intervention Required - Toner Low	40038	88 Toner is low	х	Х
Intervention Required - Toner Low	40038	88 Toner Low	х	Х
Intervention Required - Toner Low	40038	88 Yellow Toner Low 88 Magenta Toner Low 88 Cyan Toner Low 88 Black Toner Low	X	X
		88 Color Print Cartridge Low 88 Black Print Cartridge Low 88 Photo Print Cartridge Low	X	Х
		88 Yellow Toner Empty 88 Magenta Toner Empty 88 Cyan Toner Empty 88 Black Toner Empty	Х	х
Intervention Required - Cartridge Nearly Low	40038	88.xx Cartridge nearly low	х	Х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported X = Not supported			Printer m	odel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Cartridge Empty	40039	89 Cartridge Empty [CMYK]	х	Х
Intervention Required - Load Staples	40040	Load Staples	х	Х
Intervention Required - Priming Failed. Retry?	40041	Priming Failed. Retry?	Х	х
Intervention Required - PJL OP Message	40048	OPMSG message	<b>√</b>	<b>√</b>
Intervention Required - PJL ST Message	40049	STMSG message	<b>√</b>	<b>√</b>
Intervention Required - Replace Fuser	40050	Replace Fuser	х	х
Intervention Required - Replace Transfer Kit	40050	Replace Transfer Kit	х	х
Intervention Required - Incompatible Bin [x]	40087	59 Incompatible Bin [x]	х	х
Intervention Required - Incompatible Bin [x]	40087	59 Incompatible output bin [x]	х	х
Intervention Required - Incompatible Duplex	40088	59 Incompatible Duplex	х	х
Intervention Required - Incompatible Duplex	40088	59 Incompatible duplex	х	х
Intervention Required - Incompatible Tray [x]	40089	59 Incompatible Tray [x]	х	х
Intervention Required - Incompatible Tray [x]	40089	59 Incompatible tray [x]	х	х
Intervention Required - Paper Size Unsupported	40089	Tray [x] paper size unsupported	<b>√</b>	<b>√</b>
Intervention Required - Incompatible Envelope Feeder	40090	59 Incompatible Envelope Feeder	х	х
Intervention Required - Incompatible Envelope Feeder	40090	59 Incompatible envelope feeder	Х	Х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported  X = Not supported			Printer mo	odel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Check Duplex Connection	40095	Check Duplex Connection	х	х
Intervention Required - Check Duplex Connection	40095	Check duplex connection	Х	х
Intervention Required - Install Duplex or Cancel Job	40095	Install Duplex or Cancel Job	Х	х
Intervention Required - Install Duplex or Cancel Job	40095	Install duplex	Х	Х
Intervention Required - Duplex Cover Open	40096	Close Duplex Door	х	Х
Intervention Required - Insert Duplex Option	40096	Insert Duplex Option	х	Х
Intervention Required - Load Staples	40101	Load Staples	X	Х
Intervention Required - Insert Hole Punch Box	40107	Insert the hole punch box	x	Х
Intervention Required - Replace Photoconductor or Imaging Unit	40129	84.xx Replace [color] imaging unit and [color] cartridge	<b>✓</b>	<b>√</b>
Intervention Required - Replace Color PC Units	40129	84 Replace color PC Units	X	Х
Intervention Required - Replace Photoconductor	40129	84.xx Replace [Color] photoconductor	X	х
Intervention Required - Replace Waste Toner Bottle	40141	82.xx Replace waste toner bottle	<b>✓</b>	<b>√</b>
Intervention Required - Replace Waste Toner	40141	82 Replace waste toner bottle	х	Х
Intervention Required - Waste Toner Bottle Nearly Full	40141	82.xx Waste toner bottle nearly full	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported			Diink	adal
X = Not supported	Charles and a	D. d	Printer model	
Message Intervention Required - Waste Toner Nearly Full	Status code 40141	Return string  82 Waste toner bottle nearly full	C925de, C925dte <b>X</b>	X925de X
Intervention Required - Transfer Module Missing	40143	83.xx Transfer module missing	<b>✓</b>	<b>√</b>
Intervention Required - Cartridge Low	40200	88.xx Black cartridge low	✓	<b>√</b>
Intervention Required - Cartridge Nearly Low	40200	88.1x black cartridge nearly low	x	Х
Intervention Required - Cartridge Very Low	40200	88.xx Black cartridge very low	<b>√</b>	<b>√</b>
Intervention Required - Replace Cartridge	40200	88.2x Replace black cartridge	✓	<b>√</b>
Intervention Required - Cartridge Low	40201	88.xx Cyan cartridge low	✓	<b>√</b>
Intervention Required - Cartridge Nearly Low	40201	88.1x cyan cartridge nearly low	X	Х
Intervention Required - Cartridge Very Low	40201	88.xx Cyan cartridge very low	✓	<b>√</b>
Intervention Required - Replace Cartridge	40201	88.2x Replace cyan cartridge	✓	<b>√</b>
Intervention Required - Cartridge Low	40202	88.xx Magenta cartridge low	<b>✓</b>	<b>√</b>
Intervention Required - Cartridge Nearly Low	40202	88.1x magenta cartridge nearly low	х	Х
Intervention Required - Cartridge Very Low	40202	88.xx Magenta cartridge very low	✓	<b>√</b>
Intervention Required - Replace Cartridge	40202	88.2x Replace magenta cartridge	✓	<b>√</b>

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported  X = Not supported			Printer me	ndel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Cartridge Low	40203	88.xx Yellow cartridge low	<b>√</b>	✓
Intervention Required - Cartridge Nearly Low	40203	88.1x yellow cartridge nearly low	х	х
Intervention Required - Cartridge Very Low	40203	88.xx Yellow cartridge very low	✓	<b>√</b>
Intervention Required - Replace Cartridge	40203	88.2x Replace yellow cartridge	✓	<b>√</b>
Black PC Unit Life Warning	40204	84 Black pc unit life warning	х	х
Intervention Required - Unsupported PC Unit	40204	84 unsupported [color] imaging unit	<b>√</b>	<b>√</b>
Intervention Required - Unsupported PC Unit	40204	84 unsupported [color] pc unit	х	х
Intervention Required - Color PC Units Life Warning	40204	84.xx Color PC Unit Life warning	х	х
Intervention Required - PC Kit Life Warning	40204	84 PC kit life warning	х	Х
Intervention Required - Photoconductor Low	40204	84.xx [Color] photoconductor low	х	Х
Intervention Required - Photoconductor Low	40204	84 Photoconductor low	х	х
Intervention Required - Photoconductor Nearly Low	40204	84.xx [color] photoconductor nearly low	х	х
Intervention Required - Transfer Module Life Warning	40215	83.xx Transfer module life warning	х	х
Intervention Required - Transfer Module Near Life Warning	40215	83.xx Transfer module near life warning	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported				
X = Not supported			Printer mo	odel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required -	40216	87 Fuser Life Warning	x	X
Fuser Life Warning		-	_	
Intervention Required - Fuser Life Warning	40216	80.xx Fuser life warning	<b>√</b>	<b>√</b>
Intervention Required - Fuser Near Life Warning	40216	80.xx Fuser near life warning	✓	<b>√</b>
Intervention Required - Replace Toner	40300	88 Replace black	х	Х
Intervention Required - Replace Toner	40301	88 Replace cyan	х	х
Intervention Required - Replace Toner	40302	88 Replace magenta toner	х	Х
Intervention Required - Replace Toner	40303	88 Replace yellow toner	х	Х
Intervention Required - Replace PC Kit	40304	84 Replace PC Kit	х	Х
Intervention Required - Replace Photoconductor	40304	84 Replace photoconductor	х	Х
Intervention Required - 84 Replace Black PC Unit	40305	84 Replace black PC Unit	Х	Х
Intervention Required - Cartridge Part Number Unsupported	40309	32.xx Black cartridge part number unsupported by device	<b>✓</b>	<b>√</b>
Intervention Required - Replace unsupported cartridge	40309	32.xx Replace unsupported black cartridge	х	Х
Intervention Required - Invalid Refill, Change Cartridge	40309	40 black invalid refill, change cartridge	х	х
Intervention Required - Cartridge Part Number Unsupported	40310	32.xx Cyan cartridge part number unsupported by device	<b>✓</b>	<b>√</b>

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported X = Not supported			Printer m	odel
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Replace unsupported cartridge	40310	32.xx Replace unsupported cyan cartridge	х	Х
Intervention Required - Invalid Refill, Change Cartridge	40310	40 cyan invalid refill, change cartridge	х	х
Intervention Required - Cartridge Part Number Unsupported	40311	32.xx Magenta cartridge part number unsupported by device	<b>√</b>	<b>√</b>
Intervention Required - Replace unsupported cartridge	40311	32.xx Replace unsupported magenta cartridge	х	х
Intervention Required - Invalid Refill, Change Cartridge	40311	40 magenta invalid refill, change cartridge	х	х
Intervention Required - Cartridge Part Number Unsupported	40312	32.xx Yellow cartridge part number unsupported by device	<b>√</b>	<b>√</b>
Intervention Required - Replace unsupported cartridge	40312	32.xx Replace unsupported yellow cartridge	х	х
Intervention Required - Invalid Refill, Change Cartridge	40312	40 yellow invalid refill, change cartridge	х	х
Intervention Required - Scheduled Maintenance	40315	80 Scheduled maintenance [x]  Note: [x] indicates 600K kit.	х	х
Intervention Required - Replace Transfer Module	40315	83.xx Replace transfer module	<b>√</b>	<b>√</b>

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

<ul><li>✓ = Supported</li><li>X = Not supported</li></ul>			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Replace Fuser	40316	80.xx Replace fuser	<b>√</b>	<b>√</b>
Intervention Required - Replace Fuser	40316	87.xx Replace fuser	х	Х
Intervention Required - Scheduled Maintenance	40316	80 Scheduled maintenance [x]  Note: [x] indicates 100K kit.	х	х
Intervention Required - Replace Cartridge	40400	31.xx Replace defective or missing cartridge	х	х
Intervention Required - Insert Photoconductor	40404	84 Insert photoconductor	x	х
Intervention Required - Photoconductor Abnormal	40404	84 Defective [color] imaging unit	<b>✓</b>	<b>√</b>
Intervention Required -	40404	84 Photoconductor abnormal	х	х
Intervention Required - [Color] PC Unit Missing	40405	84.41 Black PC Unit missing	х	х
Intervention Required - [Color] Photoconductor Missing	40405	84.41 Black photoconductor missing	х	х
Intervention Required - [Color] PC Unit Missing	40406	84.41 Cyan PC Unit missing	х	x
Intervention Required - [Color] Photoconductor Missing	40406	84.41 Cyan photoconductor missing	х	х
Intervention Required - [Color] PC Unit Missing	40407	84.41 Magenta PC Unit missing	х	Х
Intervention Required - [Color] Photoconductor Missing	40407	84.41 Magenta photoconductor missing	х	х
Intervention Required - [Color] PC Unit Missing	40408	84.41 Yellow PC Unit missing	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

Appendix B: PJL support \_\_\_\_\_\_67

√ = Supported				a dal
X = Not supported			Printer m	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required -	40408	84.41 Yellow	X	X
[Color] Photoconductor Missing		photoconductor missing		
Intervention Required -	40409	30.xx Missing	✓	✓
Toner Cartridge Missing		black cartridge and/or black imaging unit		
Intervention Required -	40409	30.xx Black	Х	х
Toner Cartridge Missing		toner cartridge missing		
Intervention Required -	40409	31.xx Defective	х	Х
Defective Cartridge		black cartridge		
Intervention Required -	40409	31.xx Missing or	<b>✓</b>	<b>✓</b>
Missing or Defective		defective black cartridge	·	·
Cartridge				
Intervention Required -	40410	30.xx Missing cyan cartridge	✓	✓
Toner Cartridge Missing		and/or cyan		
		imaging unit		
Intervention Required -	40410	30.xx Cyan toner	X	x
Toner Cartridge Missing		cartridge missing		
Intervention Required -	40410	31.xx Defective	х	х
Defective Cartridge		cyan cartridge		
Intervention Required -	40410	31.xx Missing or		<b>√</b>
Missing or Defective		defective cyan	,	*
Cartridge		cartridge		
Intervention Required -	40411	30.xx Missing	✓	✓
Toner Cartridge Missing		magenta cartridge		
		and/or magenta		
		imaging unit		
Intervention Required -	40411	30.xx Magenta	X	x
Toner Cartridge Missing		toner cartridge missing		
Intervention Required -	40411	31.xx Defective	х	х
Defective Cartridge		magenta		
		cartridge		

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

√ = Supported  X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Missing or Defective Cartridge	40411	31.xx Missing or defective magenta cartridge	✓	✓
Intervention Required - Toner Cartridge Missing	40412	30.xx Missing yellow cartridge and/or yellow imaging unit	✓	<b>√</b>
Intervention Required - Toner Cartridge Missing	40412	30.xx Yellow toner cartridge missing	X	Х
Intervention Required - Defective Cartridge	40412	31.xx Defective yellow cartridge	Х	х
Intervention Required - Missing or Defective Cartridge	40412	31.xx Missing or defective yellow cartridge	✓	<b>√</b>
Intervention Required - Fuser Missing	40416	80.xx Fuser missing	✓	<b>√</b>
Intervention Required - Fuser Missing	40416	87.xx Fuser missing	х	Х
Intervention Required - Insert Duplex Pages in Tray [x]	41202	Reload printed pages in Tray [x]	х	х

<sup>\*</sup> This message contains a subset of letters CMYK, where CMYK denotes Cyan, Magenta, Yellow, and Black cartridges, respectively.

## PJL messages for paper handling

√ = Supported  X = Not supported			Printer model	
Message Status code Return string			C925de, C925dte	X925de
Intervention Required - Tray [x] Empty	11хуу	Tray [paper source #] Empty	х	х
Intervention Required - Tray [x] Missing	12x01	Tray [paper source #] Missing	Х	X

√ = Supported X = Not supported		Printer model		
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Bin [x] Full	15ww1	Bin [Bin #] Full	х	х
Intervention Required - Short Paper	30034	34 Incorrect paper size, open [paper source]	<b>✓</b>	<b>✓</b>
Intervention Required - Wrong Paper Size in Tray [x]	30034	34 Wrong Paper Size in Tray [x]	Х	Х
Intervention Required - Wrong Paper Size Manual Feed	30034	34 Wrong Paper Size Manual Feed	Х	Х
Intervention Required - Remove Paper [All Output Bins]	40019	Remove paper from all bins	Х	Х
Intervention Required - Remove Paper From All Bins	40019	Remove paper from all bins	х	х
Intervention Required - Remove Paper From Output Bin [x]	40019	Remove paper from bin [x]	х	х
Intervention Required - Remove Paper Output Bin [bin #]	40019	Remove Paper Output Bin [bin #]	х	Х
Intervention Required - Remove Paper [linked set bin name]	40019	Remove paper from [linked set bin name]	х	х
Intervention Required - Remove Paper [linked set bin name]	40019	Remove Paper [linked set bin name]	х	Х
Intervention Required - Remove Paper From Standard Output Bin	40019	Remove paper from standard output bin	<b>✓</b>	<b>√</b>
Intervention Required - Remove Paper Standard Bin	40019	Remove Paper Standard Bin	х	х
Intervention Required - Photoconductor Exposure Warning	40025	Photoconductor exposure warning	х	х

√ = Supported  X = Not supported		Printer model		
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Check [Paper Source] Orientation or Guides	4100x	Check [paper source] orientation or guides	х	х
Intervention Required - Check [Paper Source] Paper Guide	4100x	Check [paper source] Paper Guide	х	х
Intervention Required - Incorrect Media	41xy	Paper changes needed	<b>√</b>	✓
Intervention Required - Load [paper source] [Custom Type Name]	41xyy	Load [paper source] with [Custom Type Name]	<b>√</b>	<b>√</b>
Intervention Required - Load [paper source] [Custom String]	41хуу	Load [paper source] with [Custom String]	<b>√</b>	<b>√</b>
Intervention Required - Load [paper source] [paper size]	41хуу	Load [paper source] with [paper size]	<b>√</b>	<b>✓</b>
Intervention Required - Load [paper source] [paper type] [paper size]	41хуу	Load [paper source] with [paper type] [paper size]	<b>✓</b>	<b>✓</b>
Intervention Required - Load Manual Request	41xyy	Load Manual Feeder with [Custom Type Name]	<b>√</b>	<b>✓</b>
Intervention Required - Load Manual Request	41хуу	Load Manual Feeder with [Custom String]	<b>√</b>	<b>✓</b>
Intervention Required - Load Manual Request	41xyy	Load Manual Feeder with [paper size]	<b>√</b>	<b>√</b>
Intervention Required - Load Manual Request	41хуу	Load Manual Feeder with [paper type] [paper size]	<b>√</b>	<b>✓</b>

√ = Supported  X = Not supported			Printer model		
Message	Status code	Return string	C925de, C925dte	X925de	
Intervention Required - Load Manual [Custom Type Name]	41xyy	Load single sheet feeder with [Custom Type Name]	X	х	
Intervention Required - Load Manual [Custom String]	41xyy	Load single sheet feeder with [Custom String]	X	Х	
Intervention Required - Load Manual [paper size]	41хуу	Load single sheet feeder with [paper size]	Х	Х	
Intervention Required - Load Manual [paper type] [paper size]	41хуу	Load single sheet feeder with [paper type] [paper size]	Х	х	
Intervention Required - Change Request	41хуу	Change [paper source] to [Custom Type Name]	<b>✓</b>	<b>✓</b>	
Intervention Required - Change Request	41хуу	Change [paper source] to [Custom Type Name], load [orientation]	<b>✓</b>	<b>✓</b>	
Intervention Required - Change Request	41xyy	Change [paper source] to [Custom String]	<b>✓</b>	<b>√</b>	
Intervention Required - Change Request	41хуу	Change [paper source] to [Custom String] load [orientation]	<b>√</b>	<b>√</b>	
Intervention Required - Change Request	41хуу	Change [paper source] to [paper type] [paper size]	<b>✓</b>	<b>✓</b>	

√ = Supported  X = Not supported			Printer model	
Message	Status code	Return string	C925de, C925dte	X925de
Intervention Required - Change Request	41хуу	Change [paper source] to [paper type] [paper size] load [orientation]	<b>✓</b>	✓
Intervention Required - Load Manual Request	41xxy	Load Manual Feeder with [Custom Type Name]	X	х
Intervention Required - Load Manual Request	41xxy	Load Manual Feeder with [Custom String]	X	х
Intervention Required - Load Manual Request	41xxy	Load Manual Feeder with [paper size]	X	х
Intervention Required - Load Manual Request	41xxy	Load Manual Feeder with [paper type] [paper size]	х	х
Intervention Required - Incorrect Media	41хуу	34 Incorrect Media	х	х
Intervention Required - Insert Duplex Pages & Press Go.	412yy	Insert Duplex Pages & Press Go.	х	х
Intervention Required - Insert Tray [x]	4300x	Insert tray [x]	<b>√</b>	<b>√</b>
Intervention Required - Insert Tray Request	4300x	Insert Tray [x]	х	х

Appendix B: PJL support 73

#### PJL messages for paper jams

√ = Supported  Y = Not supported		Printer m	odol
X = Not supported  Message	Status code	C925de, C925dte	X925de
Intervention Required - Paper Jam	4200x	x	X
Intervention Required - Paper Jam	4200z	✓	<b>√</b>
Intervention Required - Paper Jam	4201x	Х	х
Intervention Required - Paper Jam	4201z	✓	✓
Intervention Required - Paper Jam	4202x	Х	х
Intervention Required - Paper Jam	4202z	х	х
Intervention Required - Paper Jam	4203x	х	х
Intervention Required - Paper Jam	4203z	<b>√</b>	<b>✓</b>
Intervention Required - Paper Jam	4204x	х	х
Intervention Required - Paper Jam	4205x	х	х
Intervention Required - Paper Jam	4206x	х	х
Intervention Required - Paper Jam	4207x	х	х
Intervention Required - Paper Jam	4208x	х	х
Intervention Required - Paper Jam	4209x	х	х
Intervention Required - Paper Jam	4210x	х	х

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

√ = Supported				
X = Not supported		Printer mo	Printer model	
Message	Status code	C925de, C925dte	X925de	
Intervention Required -	4211x	x	x	
Paper Jam				
Intervention Required -	4220x	X	X	
Paper Jam				
Intervention Required -	4221x	X	X	
Paper Jam				
Intervention Required -	4222x	x	X	
Paper Jam				
Intervention Required -	4230x	X	X	
Paper Jam				
Intervention Required -	4230z	✓	✓	
Paper Jam				
Intervention Required -	4231x	X	X	
Paper Jam				
Intervention Required -	4231z	X	X	
Paper Jam				
Intervention Required -	4232x	X	X	
Paper Jam				
Intervention Required -	4233x	x	X	
Paper Jam				
Intervention Required -	4234	X	X	
Paper Jam				
Intervention Required -	424yx	X	X	
Paper Jam				
Intervention Required -	424xz	✓	✓	
Paper Jam				
Intervention Required -	4241wy	X	X	
Paper Jam				
Intervention Required -	4241z	X	x	
Paper Jam				
Intervention Required -	4242wy	X	X	
Paper Jam				

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

√ = Supported			
X = Not supported		Printer mo	del
Message	Status code	C925de, C925dte	X925de
Intervention Required -	4242z	x	X
Paper Jam			
ntervention Required -	4243w	x	Х
aper Jam			
ntervention Required -	4243z	x	X
Paper Jam			
Intervention Required -	4244wy	x	X
Paper Jam			
Intervention Required -	4244z	X	X
Paper Jam			
Intervention Required -	4245w	X	X
Paper Jam			
Intervention Required -	4246w	x	X
Paper Jam			
Intervention Required -	4247wy	x	X
Paper Jam			
Intervention Required -	4248w	x	X
Paper Jam			
Intervention Required -	4249w	x	Х
Paper Jam			
Intervention Required -	4250w	x	X
Paper Jam			
Intervention Required -	4250x	x	Х
Paper Jam			
Intervention Required -	4250z	✓	✓
Paper Jam			
ntervention Required -	4251wy	X	X
Paper Jam			
Intervention Required -	4251x	X	Х
Paper Jam			
ntervention Required -	4252w	X	Х
Paper Jam			

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

√ = Supported			
X = Not supported		Printer mo	
Message	Status code	C925de, C925dte	X925de
Intervention Required -	4253w	x	X
Paper Jam			
Intervention Required -	4254wy	X	X
Paper Jam			
Intervention Required -	4255	X	Х
Paper Jam			
Intervention Required -	4256w	x	X
Paper Jam			
Intervention Required -	4257w	X	X
Paper Jam			
Intervention Required -	4258w	x	X
Paper Jam			
Intervention Required -	4259wy	x	X
Paper Jam			
Intervention Required -	4260w	X	X
Paper Jam			
Intervention Required -	4260x	x	X
Paper Jam			
Intervention Required -	4260z	x	X
Paper Jam			
Intervention Required -	4261w	X	Х
Paper Jam			
Intervention Required -	4261x	X	X
Paper Jam			
Intervention Required -	427xz	<b>√</b>	<b>√</b>
Paper Jam		·	·
Intervention Required -	427zx	X	Х
Paper Jam			
Intervention Required -	4271	X	Х
Paper Jam			
Intervention Required -	4271z	X	Х
Paper Jam			

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

√ = Supported			
X = Not supported		Printer mo	del —————
Message	Status code	C925de, C925dte	X925de
Intervention Required -	4272	x	X
Paper Jam			
Intervention Required -	4272z	X	X
Paper Jam			
Intervention Required -	4273	x	X
Paper Jam			
Intervention Required -	4280w	x	Х
Paper Jam			
Intervention Required -	4280x	X	Х
Paper Jam			
Intervention Required -	4280z	✓	$\checkmark$
Paper Jam			
Intervention Required -	4281w	X	Х
Paper Jam			
Intervention Required -	4281x	x	X
Paper Jam			
Intervention Required -	4281z	X	Х
Paper Jam			
Intervention Required -	4282w	X	Х
Paper Jam			
Intervention Required -	4282x	x	Х
Paper Jam			
Intervention Required -	4282z	X	Х
Paper Jam			
Intervention Required -	4283w	X	Х
Paper Jam			
Intervention Required -	4283x	X	Х
Paper Jam			
Intervention Required -	4283z	X	Х
Paper Jam			
Intervention Required -	4284w	X	Х
Paper Jam			

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

√ = Supported			
X = Not supported		Printer model	
Message	Status code	C925de, C925dte	X925de
Intervention Required -	4284x	x	x
Paper Jam			
Intervention Required -	4284z	X	X
Paper Jam			
Intervention Required -	4285w	x	X
Paper Jam			
Intervention Required -	4285z	x	X
Paper Jam			
Intervention Required -	4286w	X	x
Paper Jam			
Intervention Required -	4286z	x	X
Paper Jam			
Intervention Required -	4287	x	Х
Paper Jam			
Intervention Required -	4287z	X	Х
Paper Jam			
Intervention Required -	4288	X	Х
Paper Jam			
Intervention Required -	4288z	X	Х
Paper Jam			
Intervention Required -	4289	X	Х
Paper Jam			
Intervention Required -	4289z	X	X
Paper Jam			
Intervention Required -	4290	X	X
Paper Jam			
Intervention Required -	4291	X	Х
Paper Jam			
Intervention Required -	4292	X	Х
Paper Jam			
Intervention Required -	4293	X	Х
Paper Jam			

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

√ = Supported  X = Not supported		Printer model	
Message	Status code	C925de, C925dte	X925de
Intervention Required - Paper Jam	4294	х	x
Intervention Required - Paper Jam	4295	х	x

x represents the number of jammed pages in the printer.

y represents the tray number.

z represents the bin number.

#### **Service errors**

√ = Supported			
X = Not supported		Printer model	
Message	Error code	C925de, C925dte X925de	
ALL SERVICE MESSAGES	50000	x x	

#### **Device attendance messages**

√ = Supported X = Not supported	Printer model	
Message	C925de, C925dte	X925de
RDYMSG	<b>✓</b>	<b>✓</b>
OPMSG	<b>✓</b>	<b>✓</b>
STMSG	<b>√</b>	<b>√</b>

#### **Lexmark-unique PJL commands**

These commands are Lexmark extensions which have been added to the PJL command set to provide the user with remote control of many printer functions.

√ = Supported		
X = Not supported	Printer model	
Command	C925de, C925dte	X925de
LBEEP	<b>✓</b>	✓
LPORTROTATE	<b>✓</b>	<b>✓</b>

√ = Supported		
X = Not supported		
Command	C925de, C925dte	X925de
LPRINT testpage	✓	<b>✓</b>
LPRINTDIRECTORY	✓	✓
• LPRINTTESTPAGE	✓	<b>√</b>
• LPRINTMENUS	✓	<b>✓</b>
• LPRINTPCLFONTS	✓	<b>✓</b>
• LPRINTPSFONTS	✓	<b>✓</b>
LESCAPECHAR	✓	<b>√</b>
LFAX PHONENUMBER	Х	<b>√</b>
LOPENFILE	✓	<b>√</b>
LCLOSEFILE	✓	<b>√</b>
LREADFILE	✓	<b>√</b>
LWRITEFILE	✓	<b>√</b>
LRUNFILE	✓	<b>√</b>
LRENAMEFILE	✓	<b>✓</b>
LDELETEFILE	✓	<b>√</b>
LFORMAT	✓	<b>√</b>
LDEFRAG	✓	<b>√</b>

## File and device protection commands

√ = Supported X = Not supported	Printer model	
Command	C925de, C925dte	X925de
LBYPASSPASSWORD KEY	<b>✓</b>	✓
LDECLARE LRESOURCE	<b>✓</b>	✓
LDELETEPASSWORD	<b>✓</b>	✓
LQUERYSEED	<b>✓</b>	<b>✓</b>

# **Appendix C: PostScript support**

## **Supplemental operators**

√ = Supported		
X = Not supported	Printer n	
Operator name	C925de, C925dte	X925de
appletalktype	✓	✓
buildtime	✓	<b>✓</b>
byteorder	✓	<b>√</b>
checkpassword	✓	<b>√</b>
currentfilenameextend	✓	<b>√</b>
currentmanualduplexmode	✓	<b>√</b>
currentuniversalsize	✓	<b>√</b>
defaulttimeouts	Х	Х
deletefile	✓	✓
devcontrol	✓	<b>√</b>
devdismount	✓	<b>√</b>
devforall	✓	<b>√</b>
devformat	✓	<b>√</b>
devmount	✓	<b>√</b>
devstatus	✓	<b>√</b>
diskonline	✓	<b>√</b>
diskstatus	✓	<b>√</b>
displayoperatormsg	✓	<b>√</b>
doidlefonts	✓	<b>√</b>
dojamrecovery	✓	<b>√</b>
doprinterrors	✓	<b>√</b>
doret	х	Х
dostartpage	<b>√</b>	<b>√</b>

√ = Supported  X = Not supported	Printer model	
Operator name	C925de, C925dte	X925de
dosysstart	/	<b>√</b>
duplexer	, , , , , , , , , , , , , , , , , , ,	<i>J</i>
duplexmode	· /	· ✓
enginesync	· /	· ✓
file	<b>√</b>	<u> </u>
filenameforall	<i>'</i>	<u> </u>
fileposition	<i>'</i>	<u> </u>
firstside	<i>'</i>	<u> </u>
fontnonzerowinding	, , , , , , , , , , , , , , , , , , ,	· ✓
hardwareiomode	<b>√</b>	<u> </u>
idlefonts	<b>/</b>	<b>√</b>
ignoresize	/	<b>√</b>
initializedisk	<b>/</b>	<u>√</u>
jobname	<b>/</b>	<u> </u>
jobsource	/	<b>✓</b>
jobtimeout	x	X
manualfeed	<b>✓</b>	<b>√</b>
manualfeedtimeout	х	Х
newsheet	✓	<b>✓</b>
pagecount	<b>✓</b>	<b>✓</b>
pagesprinted	<b>✓</b>	<b>√</b>
papertray	<b>✓</b>	<b>√</b>
printername	<b>✓</b>	<b>√</b>
product	<b>✓</b>	<b>√</b>
PS2fonts	<b>✓</b>	<b>√</b>
PS3fonts	<b>✓</b>	<b>√</b>
quiet	<b>✓</b>	<b>√</b>

√ = Supported X = Not supported	Printer model	
Operator name	C925de, C925dte	X925de
ramsize	<b>✓</b>	<b>✓</b>
realformat	<b>✓</b>	<b>√</b>
renamefile	<b>√</b>	<b>√</b>
resolution	<b>✓</b>	<b>✓</b>
revision	<b>✓</b>	<b>√</b>
sccbatch	<b>✓</b>	<b>√</b>
sccinteractive	<b>√</b>	<b>√</b>
setcoverpage	х	х
setdefaulttimeouts	<b>✓</b>	<b>✓</b>
setdoidlefonts	<b>√</b>	<b>√</b>
setdojamrecovery	<b>√</b>	<b>√</b>
setdoprinterrors	<b>√</b>	<b>√</b>
setdoret	х	х
setdostartpage	<b>✓</b>	<b>✓</b>
setdosysstart	<b>✓</b>	<b>✓</b>
setduplexmode	<b>✓</b>	<b>✓</b>
setenginesync	<b>✓</b>	<b>✓</b>
setethernetaddress	<b>✓</b>	<b>√</b>
setfilenameextend	<b>✓</b>	<b>√</b>
setfileposition	<b>✓</b>	<b>✓</b>
sethardwareiomode	<b>✓</b>	<b>✓</b>
setidlefonts	<b>✓</b>	<b>✓</b>
setignoresize	<b>✓</b>	<b>✓</b>
setjobtimeout	х	х
setmanualduplexmode	<b>✓</b>	<b>✓</b>
setpapertray	<b>✓</b>	<b>✓</b>
setprintername	<b>✓</b>	<b>✓</b>

√ = Supported  X = Not supported	Printer	Printer model	
Operator name	C925de, C925dte	X925de	
setquiet	✓	<b>√</b>	
setresolution	✓	<b>√</b>	
setsccbatch	✓	<b>√</b>	
setsccinteractive	✓	<b>√</b>	
setsoftwareiomode	✓	<b>√</b>	
settumble	✓	<b>√</b>	
setuniversalsize	✓	<b>√</b>	
setuserdiskpercent	✓	<b>√</b>	
softwareiomode	✓	<b>√</b>	
tumble	✓	<b>√</b>	
userdiskpercent	✓	<b>√</b>	
waittimeout	Х	X	

## Page device parameters

√ = Supported		
X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
BeginPage	✓	✓
Collate	<b>✓</b>	✓
DeferredMediaSelection	<b>✓</b>	✓
DeviceRenderingInfo	<b>✓</b>	✓
• Screening	x	х
- ColorGrade	x	x
- PictureGrade	x	x
- IET	x	x
- IETImagesOnly	x	х
- IETPictureGrade	х	х
- None	х	х

√ = Supported X = Not supported	Printer n	Printer model	
Key	C925de, C925dte	X925de	
• TonerSaver	✓	<b>√</b>	
PictureGrade	x	Х	
ImageEnhancement	x	Х	
ImageEnhancementType	х	х	
• PrintDarkness	✓	<b>√</b>	
AutoMediaType	<b>√</b>	<b>√</b>	
• EdgeToEdge	X	X	
• DefaultPoliciesPageSize	х	Х	
SubstituteSize	✓	<b>✓</b>	
• LineDetail	<b>✓</b>	<b>✓</b>	
• Type	✓	<b>✓</b>	
ColorCorrection	✓	<b>√</b>	
ColorBalance	✓	<b>✓</b>	
• ColorSaver	✓	<b>√</b>	
• ImageBrightness	x	Х	
• Imageess	✓	<b>√</b>	
• ImageContrast	✓	<b>✓</b>	
ImageSaturation	✓	<b>√</b>	
ManualColor	✓	<b>√</b>	
• PrintQuality	x	Х	
Duplex	✓	<b>√</b>	
EndPage		<b>✓</b>	
ExitJamRecovery		<b>√</b>	
HWResolution		<b>√</b>	
ImagingBBox		<b>√</b>	
InputAttributes		<b>√</b>	
• 0 - Tray 1		<b>J</b>	

√ = Supported		
X = Not supported	Printer	
Key	C925de, C925dte	X925de
• 1 - Tray 2	<b>√</b>	<b>√</b>
• 2 - Envelope Feeder	✓	✓
• 3 - Tray 3	✓	✓
4 - Multipurpose Feeder	✓	✓
• 5 - Tray 4	✓	✓
• 6 - Tray 5	✓	<b>✓</b>
- PageSize	✓	<b>✓</b>
- MatchAll	<b>✓</b>	<b>✓</b>
- MediaColor	✓	<b>√</b>
- MediaType	<b>✓</b>	<b>√</b>
- MediaWeight	<b>✓</b>	<b>√</b>
- InputLocation	✓	<b>√</b>
• Mode	✓	<b>✓</b>
• Priority	<b>✓</b>	<b>✓</b>
Install	<b>✓</b>	<b>✓</b>
Jog	х	х
ManualFeed	<b>✓</b>	<b>✓</b>
ManualFeedTimeout	✓	<b>√</b>
MediaColor	✓	<b>√</b>
MediaPosition	<b>√</b>	<b>√</b>
MediaType	✓	<b>√</b>
MediaWeight	✓	<b>√</b>
NumCopies	✓	<b>√</b>
Nup	✓	<b>√</b>
NupDetails	✓	<b>√</b>
• Rows	<b>√</b>	<b>√</b>
• Columns	<b>✓</b>	<b>√</b>

√ = Supported  X = Not supported	Printer	model
Кеу	C925de, C925dte	X925de
Orientation	<b>√</b>	<b>√</b>
Border		
• Order	<i>J</i>	
Type	J	J
LandscapeOverride	<i>J</i>	
OutputAttributes		
0 - Standard Bin	,	
	√ x	x
<ul><li>1 - Optional Bin 1</li><li>2 - Optional Bin 2</li></ul>	X	X
• 3 - Optional Bin 3	X	X
• 4 - Optional Bin 4	X	X
• 5 - Optional Bin 5	X	X
• 6 - Optional Bin 6	Х	X
• 7 - Optional Bin 7	Х	X
8 - Optional Bin 8	Х	Х
• 9 - Optional Bin 9	Х	X
• 10 - Optional Bin 10	Х	Х
- OutputType		<b>√</b>
- OutputLocation		<b>√</b>
- PunchModesSupported	X	X
Priority	<b>√</b>	<b>√</b>
OutputPage		<u> </u>
OutputType	<i>J</i>	
PageDeviceName	<i></i>	J
PageSize		
Policies	./	./
PageSize	/	· · · · · · · · · · · · · · · · · · ·
	, v	
PolicyNotFound	✓	<b>√</b>

√ = Supported			
X = Not supported	Printer m	Printer model	
Кеу	C925de, C925dte	X925de	
• PolicyReport	✓	<b>√</b>	
PostRenderingEnhance	x	х	
PostRenderingEnhanceDetails	х	х	
REValue	х	x	
• Type	x	x	
PowerSave	✓	<b>√</b>	
ProcessColorModel	х	x	
Punch	х	x	
SlipSheet	✓	<b>✓</b>	
SlipSheetDetails	✓	<b>√</b>	
SlipSheetSource	<b>√</b>	<b>√</b>	
• Type	<b>✓</b>	<b>√</b>	
Staple	х	х	
TraySwitch	✓	<b>√</b>	
Tumble	<b>√</b>	<b>√</b>	
UniversalDetails	✓	<b>√</b>	
• Type	✓	<b>√</b>	
• PageSize	<b>✓</b>	<b>√</b>	
Orientation	✓	<b>√</b>	
• Prompt	✓	<b>√</b>	

## **User interpreter parameters**

√ = Supported  X = Not supported		Printer model	
Key Default		C925de, C925dte	X925de
AccurateScreens	false	<b>✓</b>	<b>✓</b>
CollatedCopies	Collation - Collated Copies (QTY) value	<b>✓</b>	<b>✓</b>
HalftoneMode	0	✓	<b>√</b>

√ = Supported  X = Not supported		Printer model	
Кеу	Default	C925de, C925dte	X925de
IdiomRecognition	true	<b>✓</b>	<b>✓</b>
JobName	()	<b>✓</b>	<b>✓</b>
JobTimeout	JobTimeout system parameter	<b>✓</b>	<b>✓</b>
MaxDictStack	255	<b>✓</b>	<b>✓</b>
MaxExecStack	10015	<b>✓</b>	<b>✓</b>
MaxFontItem	12500	<b>✓</b>	<b>✓</b>
MaxFormItem	100000	<b>✓</b>	<b>✓</b>
MaxLocalVM	2147483647	<b>✓</b>	<b>✓</b>
MaxOpStack	100000	<b>√</b>	<b>✓</b>
MaxPatternItem	20000	<b>√</b>	<b>✓</b>
MaxScreenItem	48000	<b>√</b>	<b>✓</b>
MaxSuperScreen	1024	<b>√</b>	<b>/</b>
MaxUPathItem	5000	<b>✓</b>	<b>✓</b>
MinFontCompress	2147483647	<b>✓</b>	<b>√</b>
PageCount	0	<b>✓</b>	<b>✓</b>
UseOldcopypage	false	<b>✓</b>	<b>✓</b>
VMReclaim	0	<b>/</b>	<b>√</b>
VMThreshold	25000 per MB of RAM	<b>/</b>	<b>√</b>
WaitTimeout	WaitTimeout system parameter		

## **System interpreter parameters**

√ = Supported X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
BuildTime	<b>✓</b>	<b>✓</b>
ByteOrder	<b>✓</b>	<b>√</b>
CurDisplayList	<b>✓</b>	<b>✓</b>

√ = Supported  X = Not supported	Printer r	Printer model	
Кеу	C925de, C925dte	X925de	
CurFontCache	✓	<b>✓</b>	
CurFormCache	✓	<b>✓</b>	
CurInputDevice	✓	<b>✓</b>	
CurOutlineCache	✓	<b>✓</b>	
CurOutputDevice	✓	<b>✓</b>	
CurPatternCache	<b>√</b>	<b>✓</b>	
CurScreenStorage	<b>√</b>	<b>√</b>	
CurSourceList	<b>✓</b>	<b>✓</b>	
CurUPathCache	<b>✓</b>	<b>✓</b>	
DisableFastProcs	<b>✓</b>	<b>√</b>	
DoPrintErrors	<b>✓</b>	<b>√</b>	
DoStartPage	<b>✓</b>	<b>√</b>	
EnableExtraFonts	<b>✓</b>	<b>√</b>	
EngineBoot	<b>✓</b>	<b>√</b>	
EngineCode	<b>✓</b>	<b>√</b>	
EngineSpeed	<b>✓</b>	<b>√</b>	
EnvironmentSave	<b>✓</b>	<b>√</b>	
FactoryDefaults	<b>✓</b>	<b>√</b>	
FatalErrorAddress	<b>✓</b>	<b>✓</b>	
FontResourceDir	<b>✓</b>	<b>√</b>	
FontVersion	<b>✓</b>	<b>✓</b>	
GenericResourceDir	<b>✓</b>	<b>√</b>	
GenericResourcePathSep		<b>√</b>	
InstalledRam	<b>/</b>	<b>√</b>	
JobTimeout	<b>✓</b>	<b>√</b>	
languagelevel	<b>✓</b>	<b>√</b>	
MaxDisplayList	<b>✓</b>	<b>✓</b>	

√ = Supported X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
MaxDisplayAndSourceList	<b>✓</b>	✓
MaxFontCache	<b>✓</b>	<b>√</b>
MaxFormCache	<b>✓</b>	<b>√</b>
MaxImageBuffer	<b>✓</b>	<b>√</b>
MaxOutlineCache	<b>✓</b>	<b>√</b>
MaxPatternCache	<b>✓</b>	<b>√</b>
MaxPermanentVM	<b>✓</b>	<b>√</b>
MaxRasterMemory	<b>/</b>	<b>√</b>
MaxScreenStorage	<b>✓</b>	<b>√</b>
MaxSourceList	<b>✓</b>	<b>√</b>
MaxUPathCache	<b>✓</b>	<b>√</b>
PageCount	<b>✓</b>	<b>√</b>
PanelCode	<b>✓</b>	<b>√</b>
PrinterCode	<b>✓</b>	✓
PrinterName	<b>✓</b>	<b>√</b>
RamSize	<b>✓</b>	<b>√</b>
RealFormat	<b>✓</b>	<b>√</b>
Revision	<b>✓</b>	<b>√</b>
SearchBuiltinFontsFirst	<b>✓</b>	<b>√</b>
SerialNumber	<b>✓</b>	<b>√</b>
StartJobPassword	<b>✓</b>	<b>√</b>
StartupMode	<b>✓</b>	<b>√</b>
StaticRamSize	<b>✓</b>	<b>√</b>
SystemParamsPassword	<b>✓</b>	<b>√</b>
UseOldcopypage	<b>✓</b>	<b>√</b>
UseOldfonts	<b>/</b>	<b>√</b>
ValidNV	<b>✓</b>	✓

√ = Supported		
X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
WaitTimeout	<b>✓</b>	✓

## **Devices supported**

= Supported = Not supported Printer model		model
Device	C925de, C925dte	X925de
%AppSocketA%		<b>√</b>
%AppSocketB%		<b>√</b>
%AppSocketC%		<b>✓</b>
%AppSocketD%	<b>√</b>	<b>✓</b>
%EthernetPhysicalA%	<b>✓</b>	<b>✓</b>
%EthernetPhysicalB%	<b>✓</b>	<b>√</b>
%EthernetPhysicalC%	<b>✓</b>	<b>√</b>
%EthernetPhysicalD%	<b>✓</b>	<b>√</b>
%EtherTalkA%	<b>✓</b>	<b>√</b>
%EtherTalkB%	<b>✓</b>	<b>√</b>
%EtherTalkC%	<b>✓</b>	<b>√</b>
%EtherTalkD%	<b>✓</b>	<b>√</b>
%IP_A%	<b>✓</b>	<b>√</b>
%IP_B%	<b>✓</b>	<b>√</b>
%IP_C%	<b>✓</b>	<b>√</b>
%IP_D%	<b>✓</b>	<b>√</b>
%IR_A%	х	х
%IR_B%	х	х
%IR_C%	х	X
%IR_D%	х	X
%LexLinkA%	х	Х
%LexLinkB%	х	Х

√ = Supported		
X = Not supported	Printer	
Device	C925de, C925dte	X925de
%LexLinkC%	X	Х
%LexLinkD%	X	Х
%LocalTalkA%	✓	✓
%LocalTalkB%	✓	✓
%LocalTalkC%	✓	✓
%LocalTalkD%	✓	✓
%LPR_A%	✓	✓
%LPR_B%	✓	✓
%LPR_C%	✓	✓
%LPR_D%	✓	✓
%ParallelA%	✓	✓
%ParallelB%	✓	✓
%ParallelC%	✓	<b>✓</b>
%ParalleID%	✓	<b>√</b>
%PrintServerA%	✓	<b>√</b>
%PrintServerB%	✓	<b>✓</b>
%PrintServerC%	✓	<b>√</b>
%PrintServerD%	✓	<b>√</b>
%RemotePrinterA%	✓	<b>√</b>
%RemotePrinterB%	✓	<b>√</b>
%RemotePrinterC%	✓	<b>√</b>
%RemotePrinterD%	✓	<b>─</b>
%SerialA%	<b>✓</b>	<b>√</b>
%SerialB%	<b>√</b>	<b>√</b>
%SerialC%	✓	<b>√</b>
%SerialD%	✓	<b>√</b>
%TokenRingPhysicalA%	х	х

√ = Supported		
X = Not supported	Printer	model
Device	C925de, C925dte	X925de
%TokenRingPhysicalB%	x	x
%TokenRingPhysicalC%	х	x
%TokenRingPhysicalD%	х	х
%TokenTalkA%	х	х
%TokenTalkB%	х	х
%TokenTalkC%	х	х
%TokenTalkD%	х	х
%USB_A%	✓	<b>✓</b>
%USB_B%	✓	<b>✓</b>
%USB_C%	✓	<b>✓</b>
%USB_D%	✓	<b>✓</b>

## **Device parameters**

√ = Supported		
X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
Device Parameters for the Communication Device %Parallel%, %ParallelA%, %ParallelB%, %ParallelC%, %ParallelD%		
DelayedOutputClose	✓	<b>✓</b>
Enabled	✓	<b>✓</b>
Filtering	<b>✓</b>	<b>✓</b>
Handshake	✓	<b>✓</b>
HasNames	✓	<b>✓</b>
Interpreter	<b>✓</b>	<b>✓</b>
On	<b>✓</b>	<b>✓</b>
OutputDevice	<b>✓</b>	<b>✓</b>
PCLSmartSwitch	<b>✓</b>	<b>✓</b>
PortLocation	<b>✓</b>	<b>✓</b>
PSSmartSwitch PSSmartSwitch	<b>✓</b>	<b>✓</b>

√ = Supported  X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
Туре	<b>√</b>	<b>√</b>
Device Parameters for the Communication Device %Serial%, %SerialA%, %SerialB%, %SerialC%, %SerialD%		
Baud	<b>✓</b>	<b>✓</b>
CheckParity	<b>√</b>	<b>√</b>
DataBits	<b>√</b>	<b>√</b>
DelayedOutputClose	<b>√</b>	<b>√</b>
Enabled	<b>√</b>	<b>√</b>
Filtering	<b>√</b>	<b>√</b>
FlowControl	<b>√</b>	<b>√</b>
HasNames	<b>√</b>	<b>√</b>
HonorDSR	<b>√</b>	<b>√</b>
Interpreter	<b>√</b>	<b>√</b>
On	<b>√</b>	<b>√</b>
Parity	<b>√</b>	<b>√</b>
PCLSmartSwitch	<b>√</b>	<b>√</b>
PortLocation	<b>√</b>	<b>√</b>
PSSmartSwitch	<b>√</b>	<b>√</b>
RobustXon	<b>√</b>	<b>√</b>
SerialMode	<b>√</b>	✓
StopBits	<b>√</b>	<b>√</b>
Туре	<b>√</b>	✓
Device Parameters for the Communication Device %LocalTalk%, %LocalTalkA%, %LocalTalkB%, %LocalTalkC%, %LocalTalkD%		
DelayedOutputClose	<b>√</b>	<b>✓</b>
Enabled	✓	<b>√</b>
Filtering	<b>√</b>	✓
HasNames	<b>√</b>	<b>√</b>

√ = Supported  X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
Interpreter	✓	<b>√</b>
LocalTalkType	<b>✓</b>	<b>√</b>
NodelD	<b>✓</b>	<b>√</b>
On	<b>✓</b>	<b>√</b>
PCLSmartSwitch	<b>✓</b>	<b>√</b>
PortLocation	<b>✓</b>	<b>√</b>
PSSmartSwitch	<b>✓</b>	<b>√</b>
Туре	<b>✓</b>	<b>√</b>
Device Parameters for the Communication Device %EtherTalk%, %EtherTalkA%, %EtherTalkB%, %EtherTalkC%, %EtherTalkD%		
DelayedOutputClose	<b>✓</b>	<b>√</b>
Enabled	✓	<b>√</b>
EthernetAddress	<b>✓</b>	<b>√</b>
EtherTalkType	✓	<b>√</b>
EtherTalkZone	✓	<b>√</b>
Filtering	<b>✓</b>	<b>√</b>
HasNames	<b>✓</b>	<b>√</b>
Interpreter	<b>✓</b>	<b>√</b>
NodelD	✓	<b>√</b>
On	✓	<b>√</b>
PCLSmartSwitch	<b>✓</b>	<b>√</b>
PortLocation	<b>✓</b>	<b>√</b>
PSSmartSwitch	<b>✓</b>	<b>√</b>
Туре	<b>✓</b>	<b>√</b>
Device Parameters for the Communication Device %IR%, %IR_A%, %IR_B%, %IR_C%, %IR_D%		
DelayedOutputClose	х	х
Enabled	x	х

√ = Supported		
X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
Filtering	х	X
HasNames	x	X
Interpreter	x	X
On	x	X
PCLSmartSwitch	x	X
PortLocation	X	X
PSSmartSwitch	х	х
Туре	х	х
Device Parameters for the Communication Device %USB%, %USB_A%, %USB_B%, %USB_C%, %USB_D%		
DelayedOutputClose	<b>✓</b>	<b>√</b>
Enabled	<b>✓</b>	<b>√</b>
Filtering	<b>✓</b>	<b>✓</b>
HasNames	<b>✓</b>	<b>✓</b>
Interpreter	<b>✓</b>	<b>✓</b>
On	<b>✓</b>	<b>✓</b>
PCLSmartSwitch	✓	✓
PortLocation	<b>✓</b>	<b>✓</b>
PSSmartSwitch	<b>✓</b>	<b>✓</b>
Туре	✓	✓
Device Parameters for the Communication Device %TokenTalk%, %TokenTalkA%, %TokenTalkB%, %TokenTalkC%, %TokenTalkD%		
Address	x	X
Bridging	Х	х
DelayedOutputClose	х	х
Enabled	x	х
Filtering	х	х
HasNames	х	х
Interpreter	х	х
NodelD	х	х
On	X	X

√ = Supported		
X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
PCLSmartSwitch	X	x
PortLocation	Х	X
PSSmartSwitch	Х	Х
TokenTalkType	Х	Х
Туре	Х	Х
Zone	Х	Х
Device Parameters for the Communication Device %AppSocket%, %AppSocketA%, %AppSocketB%, %AppSocketC%, %AppSocketD%		
DelayedOutputClose	✓	<b>✓</b>
Enabled	<b>✓</b>	<b>√</b>
Filtering	<b>✓</b>	<b>✓</b>
HasNames	<b>✓</b>	<b>✓</b>
Interpreter	✓	✓
On	<b>✓</b>	✓
PortLocation	<b>✓</b>	<b>✓</b>
Туре	✓	✓
Device Parameters for the Communication Device %RemotePrinter%, %RemotePrinterA%, %RemotePrinterB%, %RemotePrinterC%, %RemotePrinterD%		
DelayedOutputClose	<b>✓</b>	<b>✓</b>
Enabled	<b>✓</b>	<b>✓</b>
Filtering	<b>✓</b>	<b>√</b>
HasNames	<b>✓</b>	<b>√</b>
Interpreter	<b>✓</b>	<b>✓</b>
On	<b>√</b>	<b>√</b>
PortLocation	<b>✓</b>	<b>✓</b>
Туре	<b>✓</b>	<b>✓</b>
Device Parameters for the Communication Device %PrintServer%, PrintServerA%, PrintServerB%, %PrintServerC%, %PrintServerD%		
DelayedOutputClose	<b>✓</b>	<b>✓</b>

√ = Supported		
X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
Enabled	✓	✓
Filtering	<b>✓</b>	<b>√</b>
HasNames	<b>✓</b>	<b>√</b>
Interpreter	<b>✓</b>	<b>√</b>
On	<b>✓</b>	<b>√</b>
PortLocation	<b>√</b>	<b>√</b>
Туре	<b>✓</b>	<b>√</b>
Device Parameters for the Communication Device %LPR%, %LPR_A%, %LPR_B%, %LPR_C%, %LPR_D%		
Enabled	<b>✓</b>	<b>✓</b>
Filtering	<b>✓</b>	<b>√</b>
HasNames	<b>✓</b>	<b>√</b>
Interpreter	<b>√</b>	<b>√</b>
On	<b>√</b>	<b>√</b>
PortLocation	<b>√</b>	<b>√</b>
Туре	<b>√</b>	<b>√</b>
Device Parameters for the Communication Device %LexLink%, %LexLinkA%, %LexLinkB%, %LexLinkC%, %LexLinkD%		
DelayedOutputClose	х	х
Enabled	X	X
HasNames	Х	X
Interpreter	х	X
On	х	Х
PortLocation	х	Х
Туре	х	Х
Device Parameters for the Communication Device %IP%, %IP_A%, %IP_B%, %IP_C%, %IP_D%		
GatewayAddress	<b>✓</b>	<b>√</b>
IPAddress	<b>✓</b>	<b>√</b>
IPAddressDynamic	<b>√</b>	<b>√</b>

√ = Supported  X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
NetworkMask	✓	<b>✓</b>
On	<b>√</b>	<b>√</b>
Physical	<b>√</b>	<b>√</b>
PortLocation	✓	<b>√</b>
Туре	<b>√</b>	<b>✓</b>
Device Parameters for the Communication Device %EthernetPhysical%, %EthernetPhysicalA%, %EthernetPhysicalB%, %EthernetPhysicalC%, %EthernetPhysicalD%		
EthernetAddress	✓	<b>√</b>
On	✓	<b>✓</b>
PortLocation	<b>√</b>	<b>√</b>
Туре	<b>√</b>	<b>✓</b>
Device Parameters for the Communication Device %TokenRingPhysical%, %TokenRingPhysicalA%, %TokenRingPhysicalB%, %TokenRingPhysicalC%, %TokenRingPhysicalD%		
Address	х	х
On	х	х
PortLocation	х	Х
Speed	х	х
Туре	х	Х
Device Parameters for the Parameters Device %Engine%		
BSizeStandard	✓	<b>√</b>
Darkness	х	х
PageCount	<b>√</b>	<b>✓</b>
TimeToStandby	<b>√</b>	<b>✓</b>
Туре	<b>√</b>	<b>√</b>
Device Parameters for the Parameters Device %Console%		
Language	<b>√</b>	<b>√</b>
Туре	<b>√</b>	<b>√</b>

√ = Supported	D	Printer model	
X = Not supported  Key	C925de, C925dte	X925de	
Device Parameters for the Parameters Device %Calendar%, %CalendarA%, %CalendarB%, %CalendarC%, %CalendarD%	eszsuc, eszsuc	ASESUC	
Day	<b>✓</b>	<b>√</b>	
Hour	<b>√</b>	<b>√</b>	
Minute	<b>√</b>	<b>√</b>	
Month	<b>√</b>	<b>√</b>	
Running	<b>√</b>	<b>√</b>	
Second	<b>√</b>	<b>√</b>	
Туре	<b>√</b>	<b>√</b>	
Year	<b>√</b>	<b>√</b>	
DateTime	<b>√</b>	<b>√</b>	
DayOfWeekLong	<b>√</b>	<b>√</b>	
DayOfWeekNum	<b>√</b>	<b>√</b>	
DayOfWeekShort	<b>√</b>	<b>√</b>	
Device Parameters for the Parameters Device %disk1%			
BlockSize	<b>✓</b>	<b>✓</b>	
Free	<b>✓</b>	<b>✓</b>	
HasNames	<b>✓</b>	<b>√</b>	
InitializeAction	<b>✓</b>	<b>√</b>	
LogicalSize	<b>✓</b>	<b>√</b>	
Mounted	<b>✓</b>	<b>√</b>	
PhysicalSize	<b>✓</b>	<b>√</b>	
Removable	<b>✓</b>	<b>√</b>	
Searchable	<b>✓</b>	<b>√</b>	
SearchOrder	<b>✓</b>	<b>√</b>	
Туре	✓	<b>√</b>	
Writeable	✓	<b>√</b>	

√ = Supported X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
Device Parameters for the Parameters Device %flash1%		
BlockSize	✓	<b>✓</b>
Free	<b>✓</b>	<b>√</b>
HasNames	<b>✓</b>	<b>√</b>
InitializeAction	<b>✓</b>	<b>√</b>
LogicalSize	<b>✓</b>	<b>√</b>
Mounted	<b>✓</b>	<b>√</b>
PhysicalSize	<b>✓</b>	<b>✓</b>
Removable	<b>✓</b>	<b>√</b>
Searchable	✓	<b>✓</b>
SearchOrder	<b>✓</b>	<b>✓</b>
Туре	<b>✓</b>	<b>✓</b>
Writeable	<b>✓</b>	<b>✓</b>
Device Parameters for the Parameters Device %rom%		
BlockSize	<b>✓</b>	<b>✓</b>
Free	<b>✓</b>	<b>✓</b>
HasNames	<b>✓</b>	<b>✓</b>
InitializeAction	<b>✓</b>	<b>√</b>
LogicalSize	<b>✓</b>	<b>√</b>
Mounted	<b>✓</b>	<b>√</b>
PhysicalSize	<b>✓</b>	<b>√</b>
Removable	✓	<b>√</b>
Searchable	✓	<b>√</b>
SearchOrder	<b>✓</b>	<b>√</b>
Туре	✓	<b>√</b>
Writeable	<b>✓</b>	<b>√</b>

## **PostScript** message keys commands

√ = Supported  X = Not supported	Printer model	
Кеу	C925de, C925dte	X925de
job	<b>✓</b>	<b>✓</b>
status	<b>✓</b>	<b>✓</b>
source	<b>√</b>	<b>✓</b>

Index 104

#### Index

#### envelope sizes supported P Α Lexmark C925 10 air temperature ranges page, printable Lexmark X925 10 PCL emulation 9 cartridges 21 envelope tray support print quality assurance 20 paper sizes supported PostScript operators 16 printer with cartridges 20 Lexmark C925 10 environmental conditions 20 airflow requirement 18 Lexmark X925 10 errors altitude specifications 21 paper sizes, PostScript PJL, service 79 ambient operating environment 21 supported by printer 13 atmospheric pressure 21 paper tray operators, PostScript 14, 15 finding more information about the C support in PostScript 14 printer 7 parameters clearance requirements 20 PostScript, device 94 commands G PostScript, page device 84 PJL, file and device protection 80 PostScript, system interpreter 89 GL/2 PJL, Lexmark-unique 79 PostScript, user interpreter 88 commands supported 28 PostScript, message keys 103 PCL emulation commands supported supported commands 22 GL/2 28 Н PCL emulation, paper and envelope PJL, common variables for both humidity ranges 21 dimensions languages 31 Lexmark C925 10 PJL, Lexmark-unique variables for L Lexmark X925 10 LRESOURCE 44 letter meanings 5 physical page PJL, Lexmark-unique variables for logical page PCL emulation 9 PCL emulation 43 PCL emulation 9 physical specifications 19 PJL, Lexmark-unique variables for PJL commands PostScript emulation 44 M common variables, both PJL, Status Readback 44 languages 31 meanings, letters after model PJL, unique variables for both common variables, PCL number 5 languages 33 emulation 43 PJL, USTATUS variables 45 messages common variables, PostScript PJL, attendance conditions 52 commands, supported emulation 44 PCL emulation 22 PJL, auto-continuable file and device protection 80 conditions 45 PJL, common variables for PCL Lexmark-unique 79 PJL, device attendance 79 emulation 43 Lexmark-unique variables, PJL, common variables for PJL, paper handling 68 LRESOURCE 44 PJL, paper jams 73 PostScript emulation 44 Lexmark-unique variables, PCL model numbers emulation 43 understanding letters 5 D Lexmark-unique variables, devices supported PostScript emulation 44 N PostScript 92 Status Readback 44 noise emission levels 18 dimensions, printer 19 unique variables, both languages 33 Ε 0 **USTATUS** variables 45 operators, envelope sizes electrical specifications 19 PJL commands, information PostScript 15 envelope sizes location support in PostScript 15 Printer Languages and Interfaces

Technical Reference 12

Index 105

PJL errors W service errors 79 weight, printer 19 PJL messages attendance conditions 52 auto-continuable conditions 45 device attendance 79 paper handling 68 paper jams 73 **PostScript** device parameters 94 devices supported 92 operators, envelope sizes 15 page device parameters 84 supplemental operators 81 supported paper sizes 13 tray operators 14 PostScript commands message keys 103 PostScript operators envelope tray support 16 PostScript parameters system interpreter 89 user interpreter 88 power requirements 19 printable areas 9 printer dimensions 19 printer information where to find 7 printer specifications airflow requirement 18 altitude 21 atmospheric pressure 21 clearance requirements 20 electrical 19 environmental conditions 20 noise emission levels 18 power requirements 19 publications where to find 7 R required clearance 20 S size, printer 19 supplemental operators PostScript 81

T

tray operators PostScript 14